



$\Delta\sigma/\sigma$  vs. E for  $^{30}\text{Si}(n,\text{tot.})$

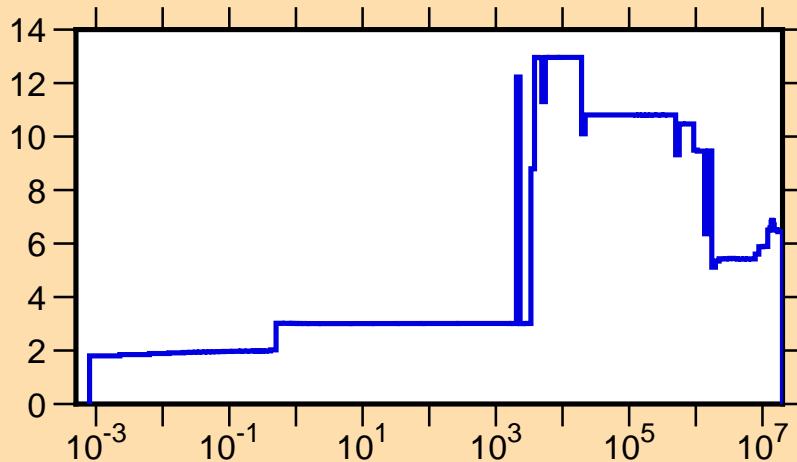

Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

$\sigma$  vs. E for  $^{30}\text{Si}(n,\text{tot.})$

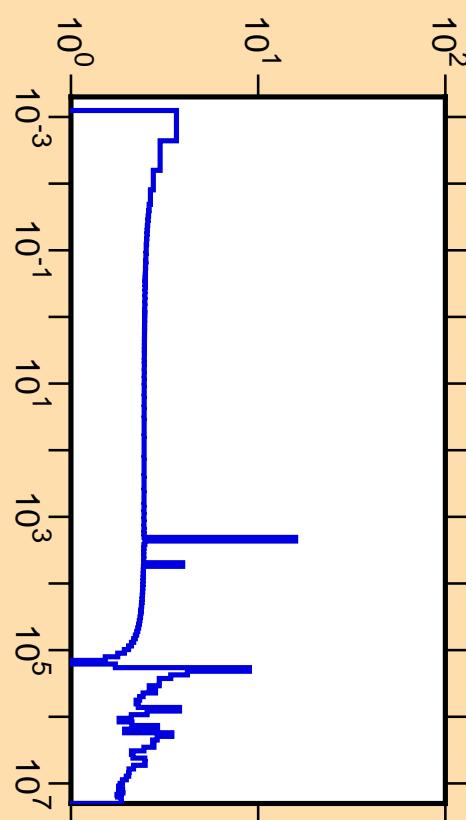



Correlation Matrix



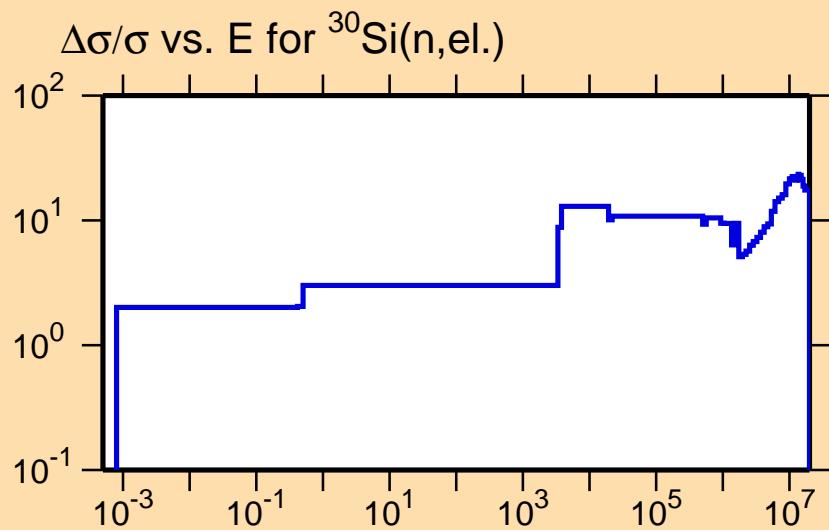


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

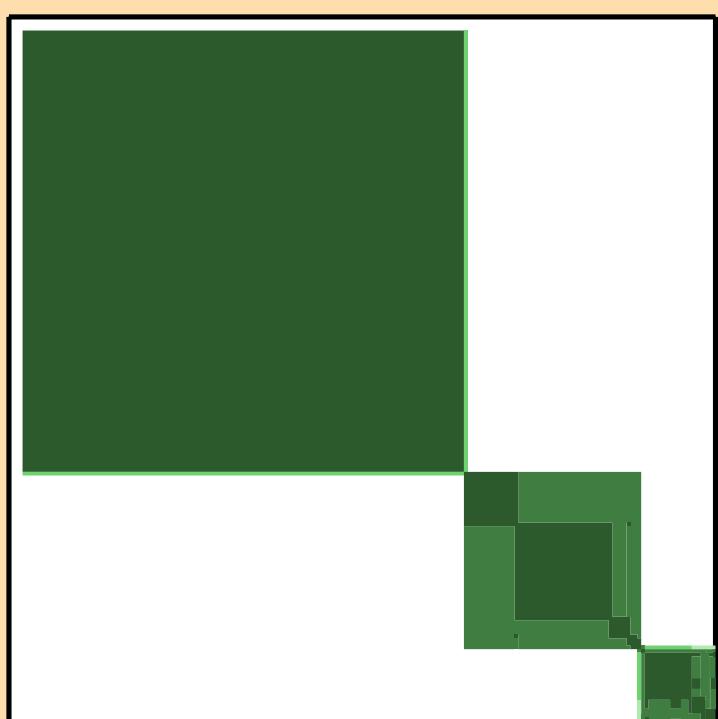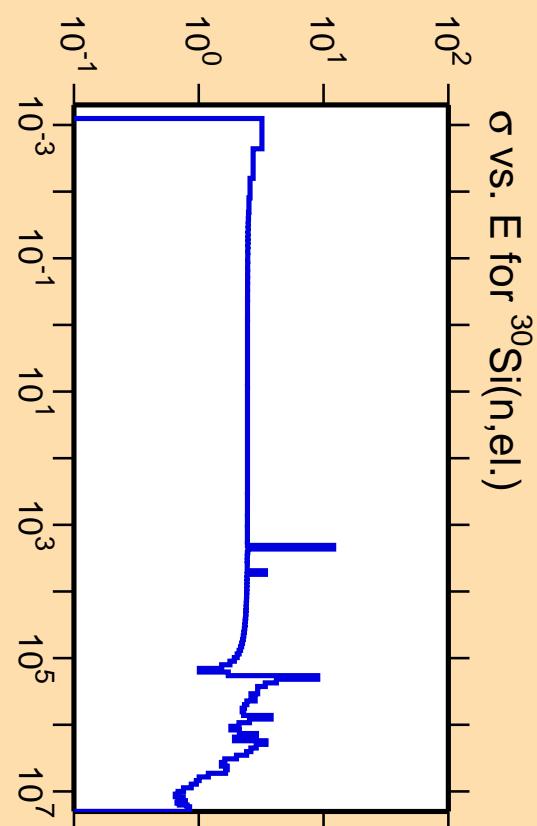

Correlation Matrix

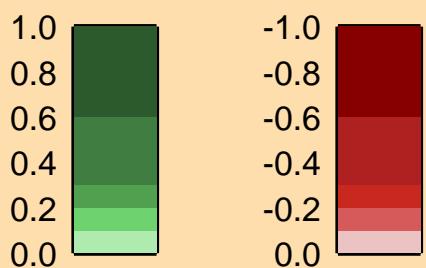


$\Delta\sigma/\sigma$  vs. E for  $^{30}\text{Si}(n,\text{inel.})$

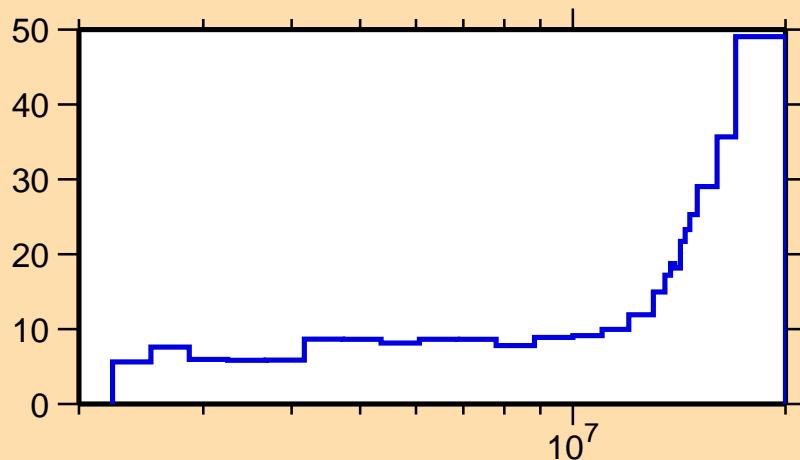

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


$\sigma$  vs. E for  $^{30}\text{Si}(n,\text{inel.})$

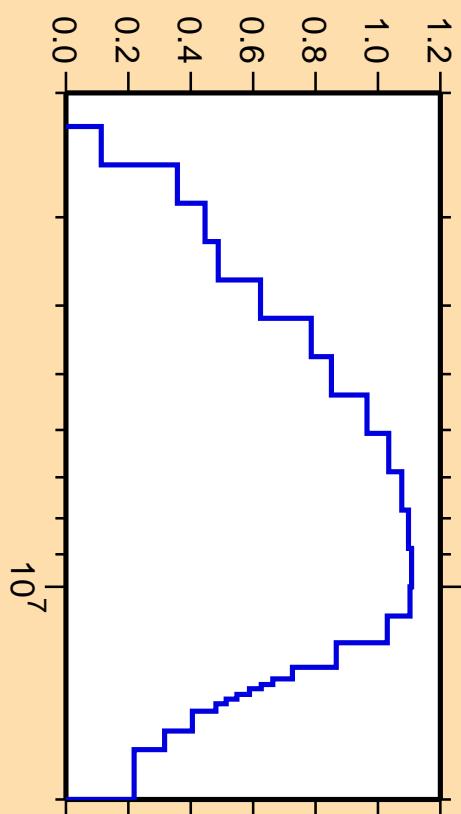

Correlation Matrix




### $\Delta\sigma/\sigma$ vs. E for $^{30}\text{Si}(n,2n)$

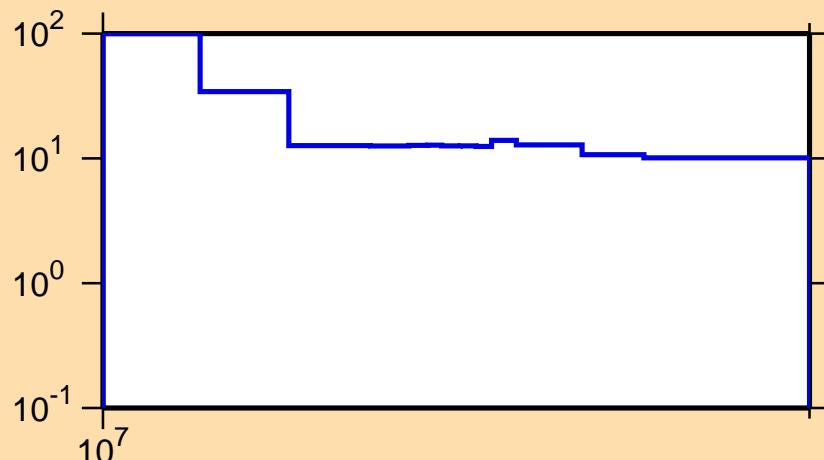


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

Warning: some uncertainty data were suppressed.

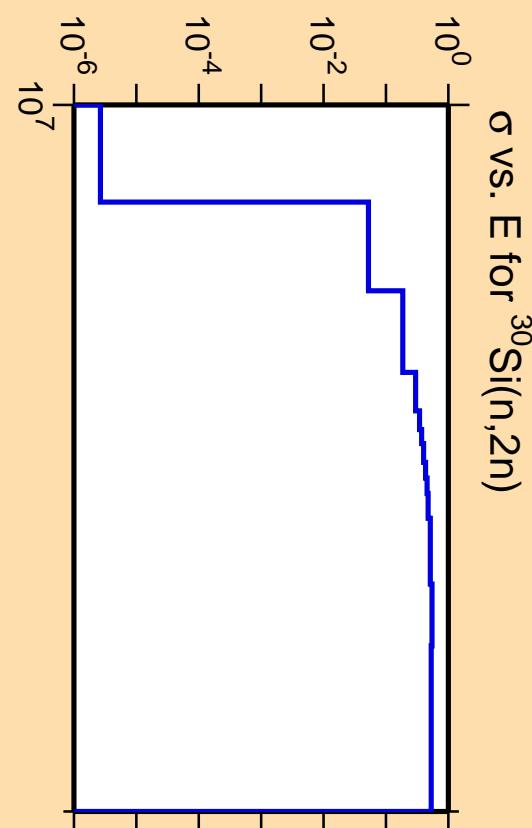



Correlation Matrix

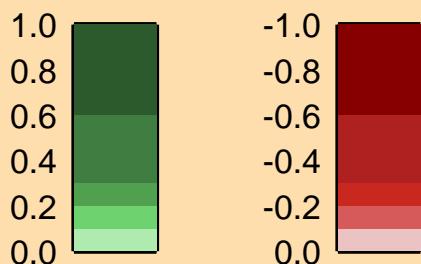

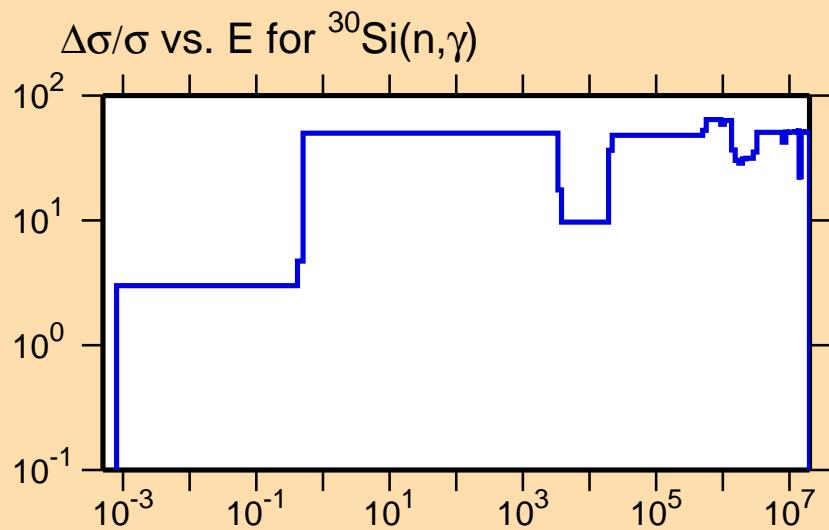

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

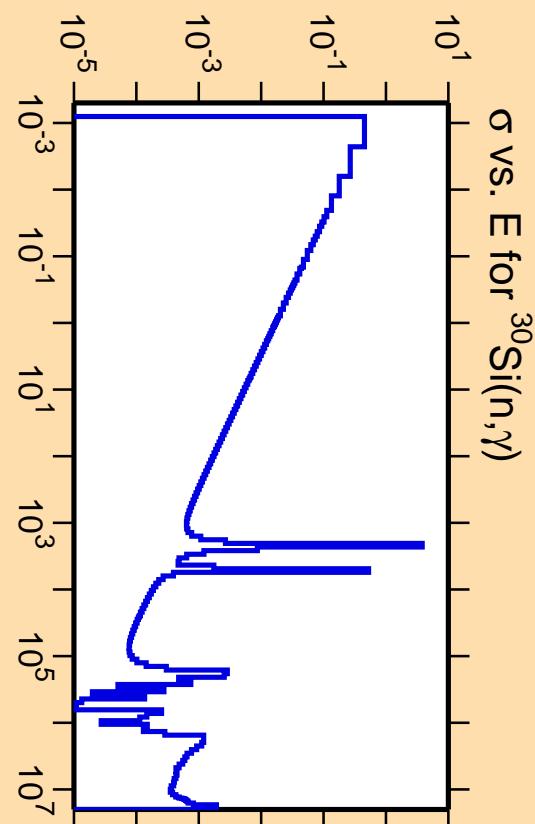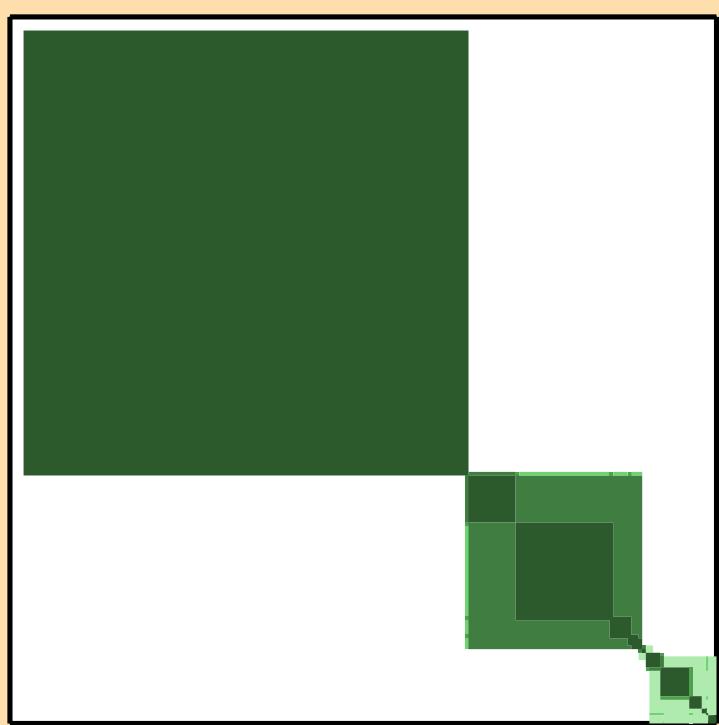

Correlation Matrix

