



$\Delta\sigma/\sigma$ vs. E for $^{46}\text{Ti}(n,\text{tot.})$

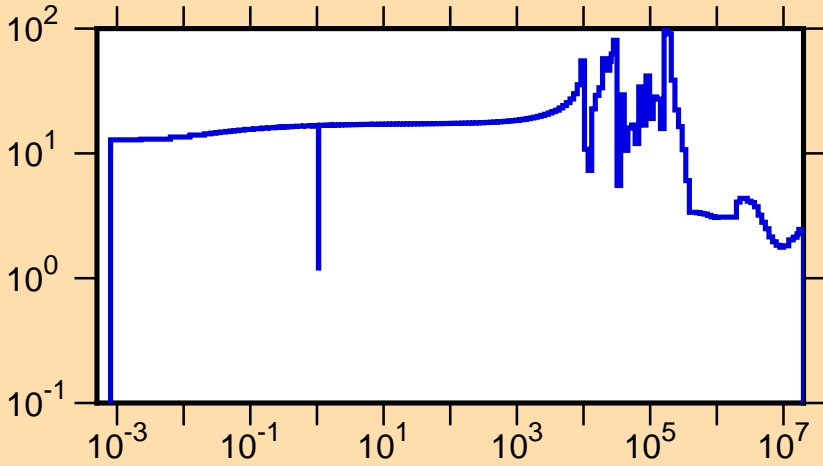



Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


Warning: some uncertainty data were suppressed.

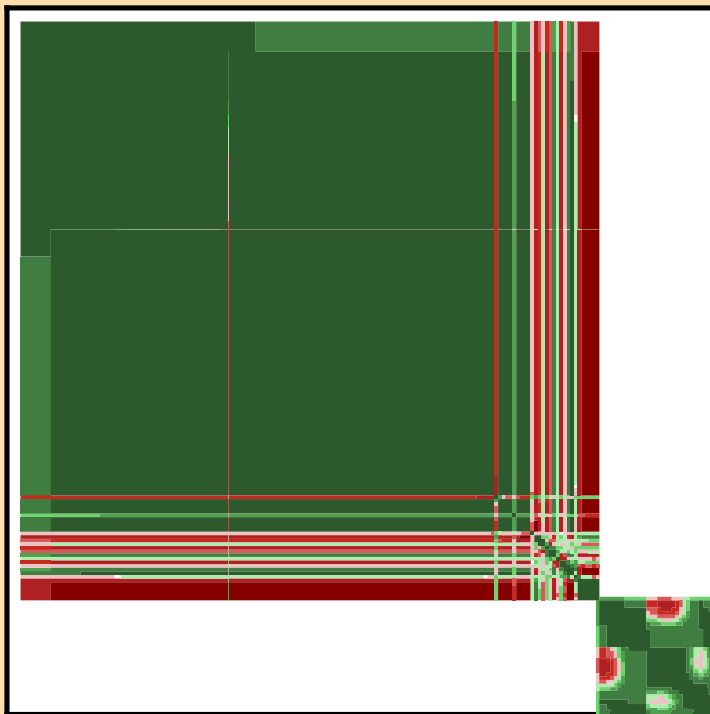

Correlation Matrix

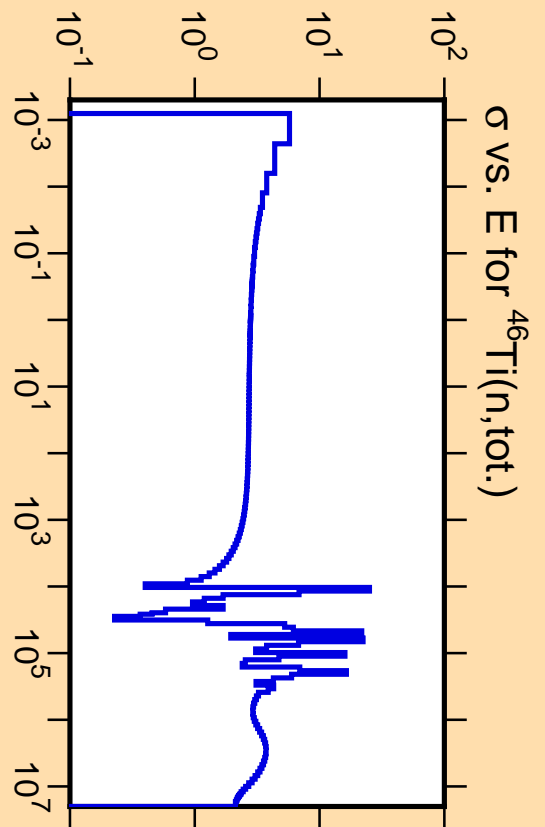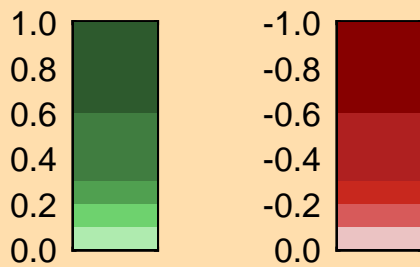


$\Delta\sigma/\sigma$ vs. E for $^{46}\text{Ti}(n,\text{el.})$

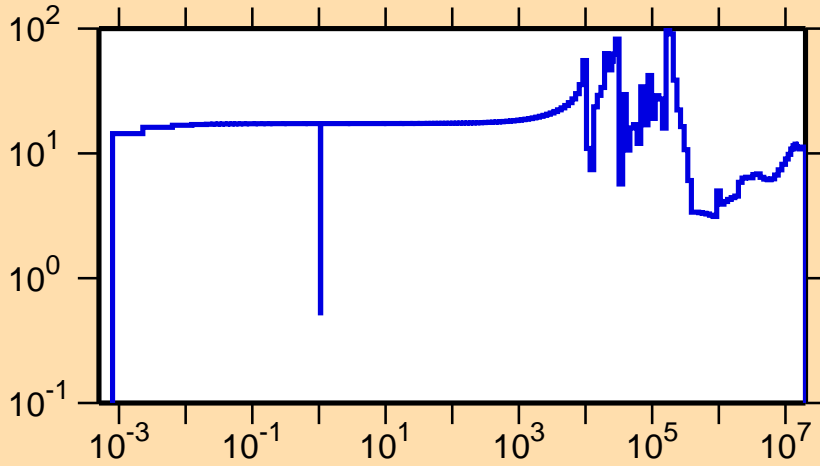



Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

Warning: some uncertainty data were suppressed.

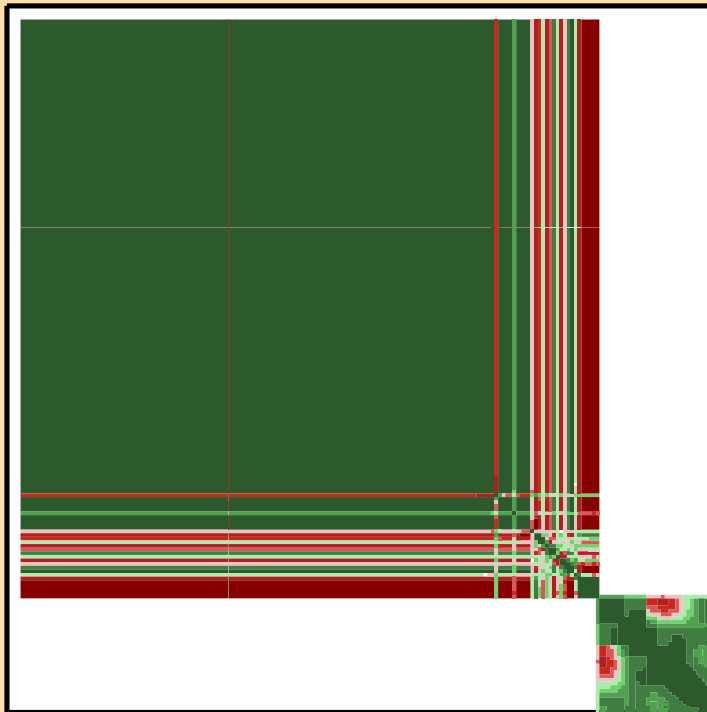


Correlation Matrix

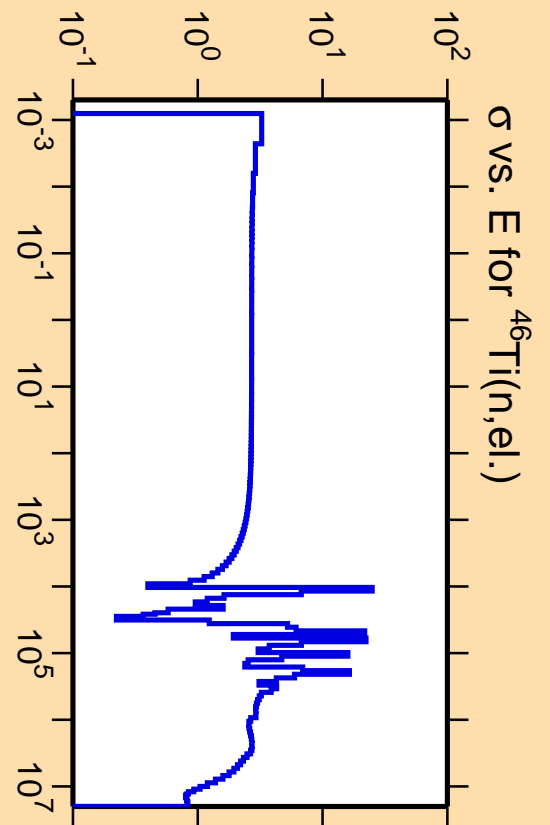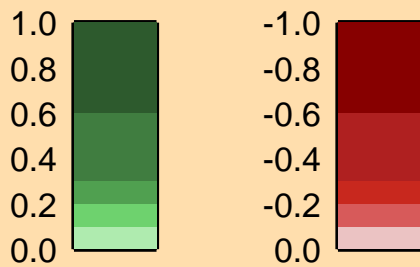


σ vs. E for $^{46}\text{Ti}(n,\text{el.})$

$\Delta\sigma/\sigma$ vs. E for $^{46}\text{Ti}(n,\text{inel.})$

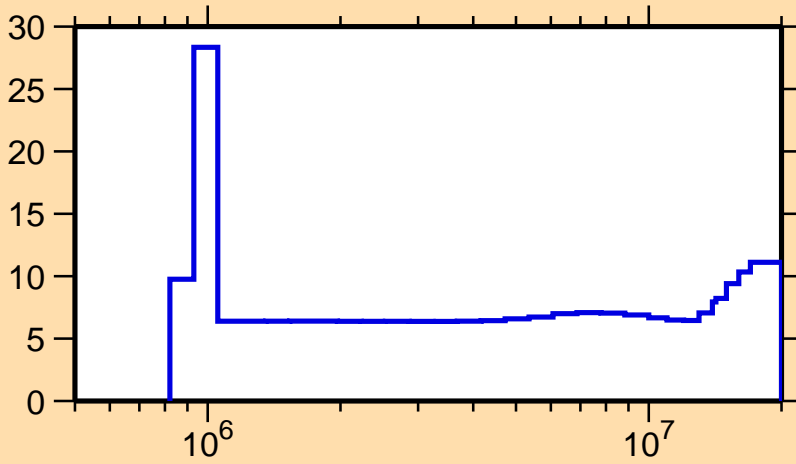


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

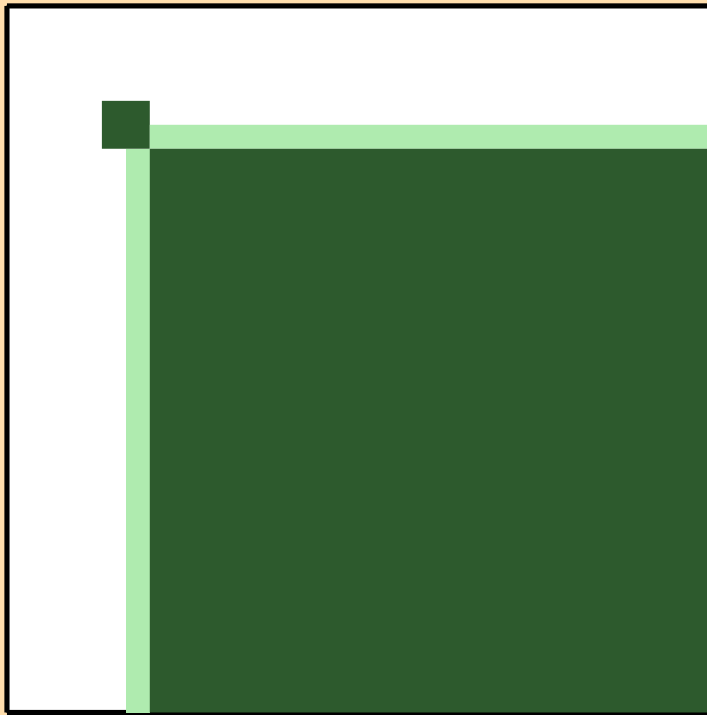

Correlation Matrix

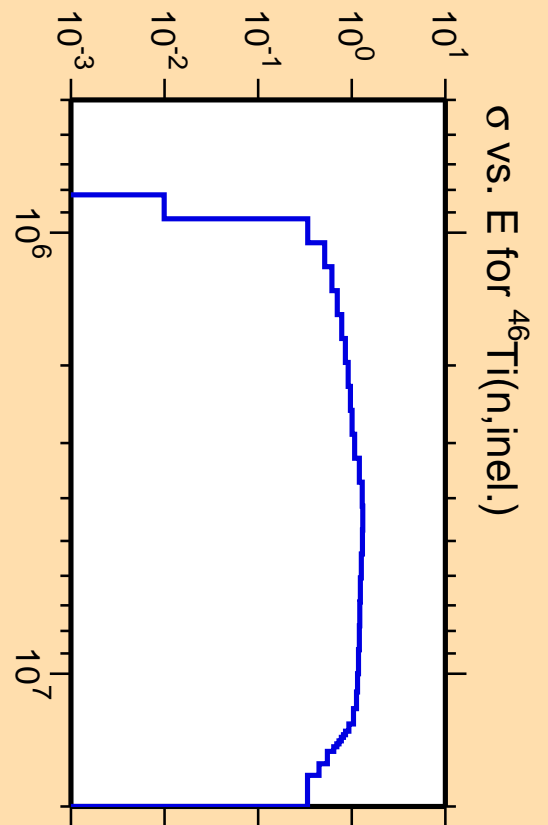


$\Delta\sigma/\sigma$ vs. E for $^{46}\text{Ti}(n,2n)$


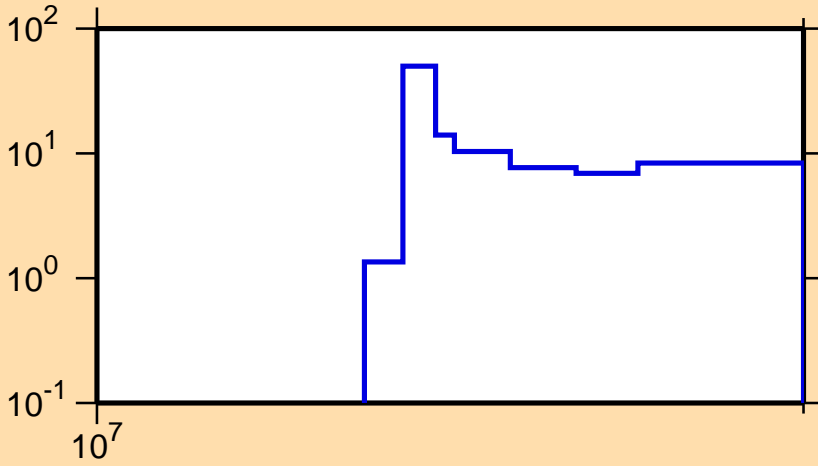


Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

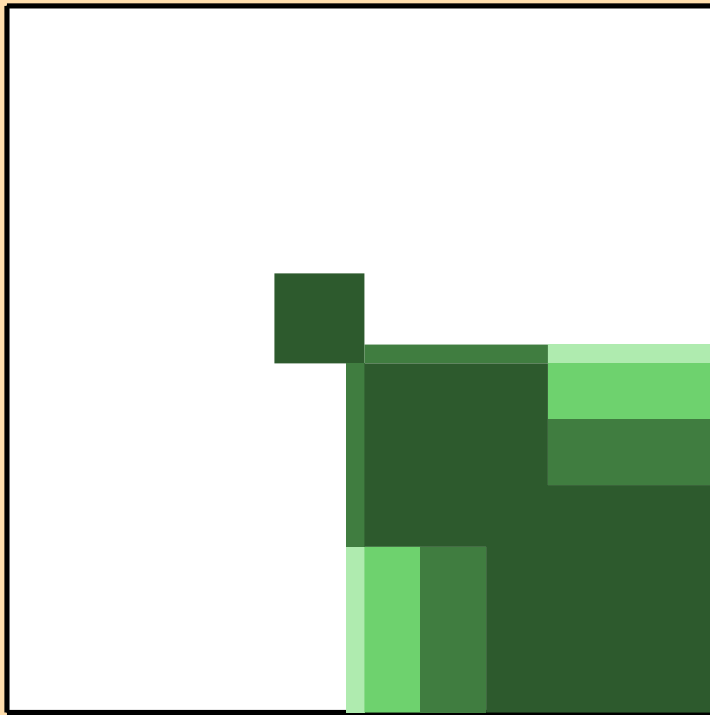


Correlation Matrix

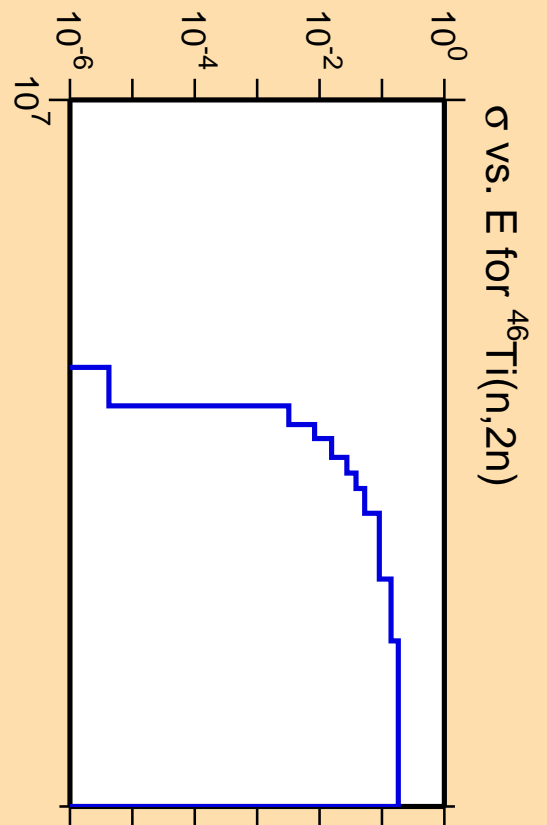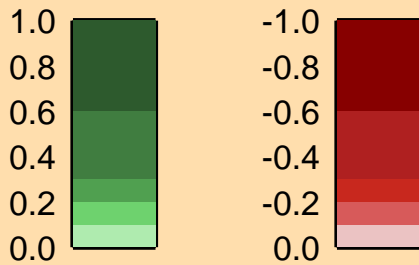

σ vs. E for $^{46}\text{Ti}(n,2n)$


$\Delta\sigma/\sigma$ vs. E for $^{46}\text{Ti}(n,\gamma)$

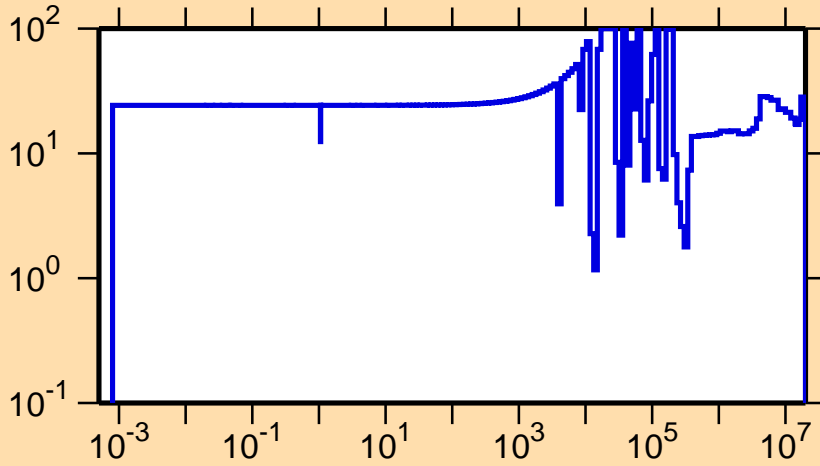

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

Warning: some uncertainty data were suppressed.

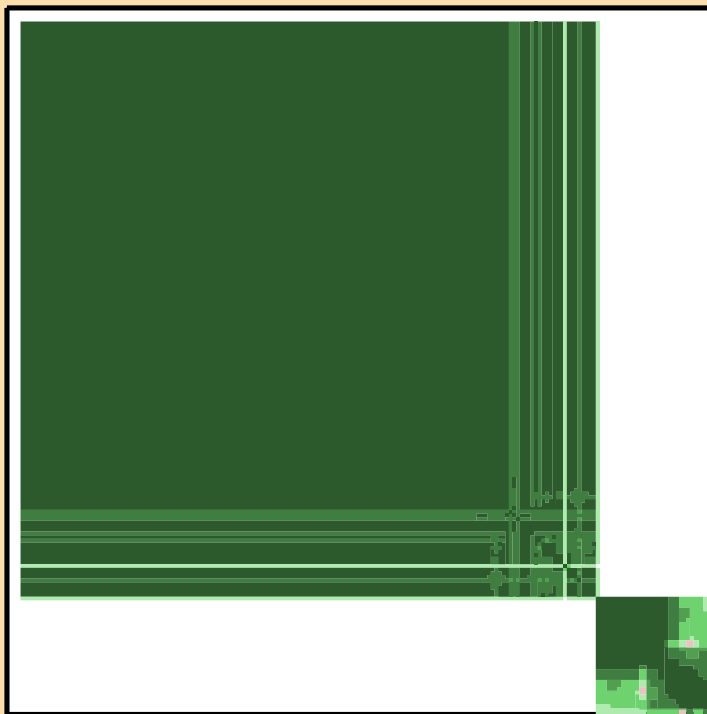

Correlation Matrix

