

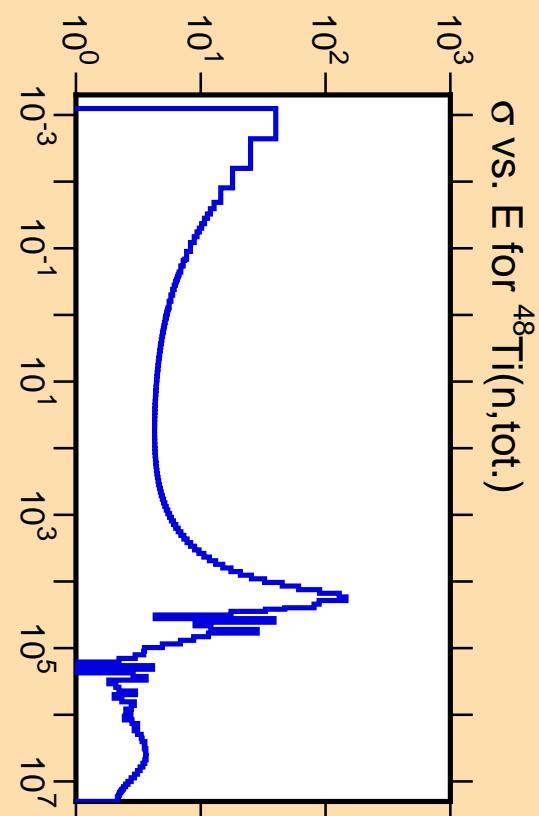



Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

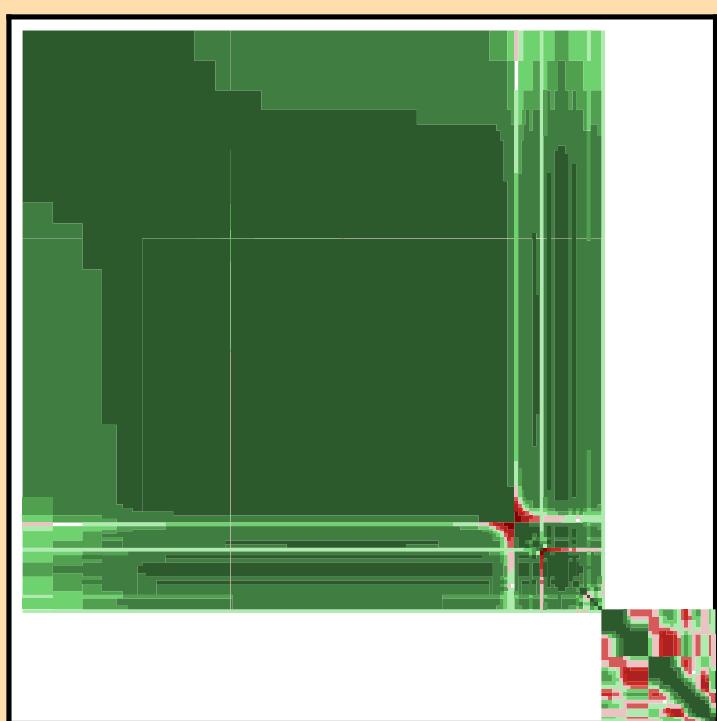



Correlation Matrix

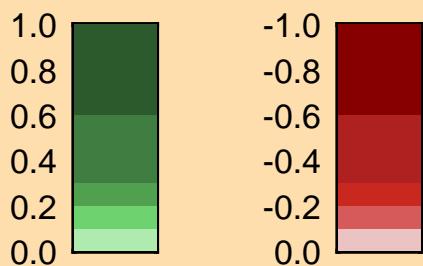

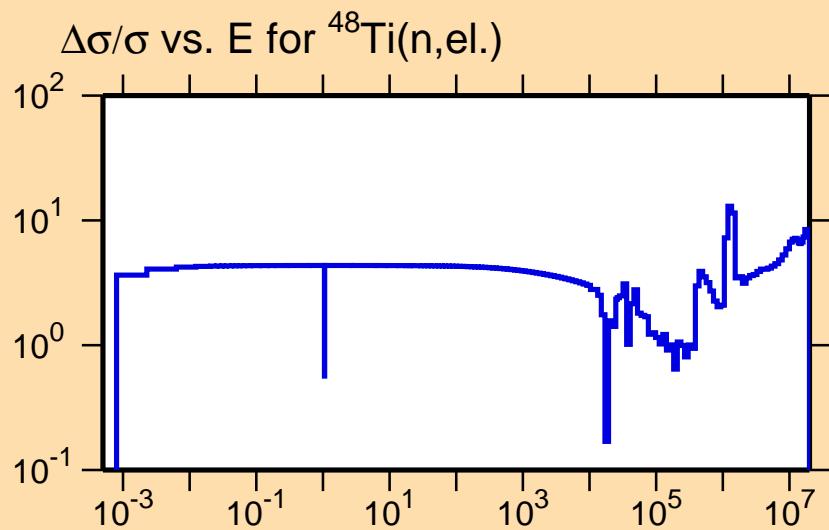


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

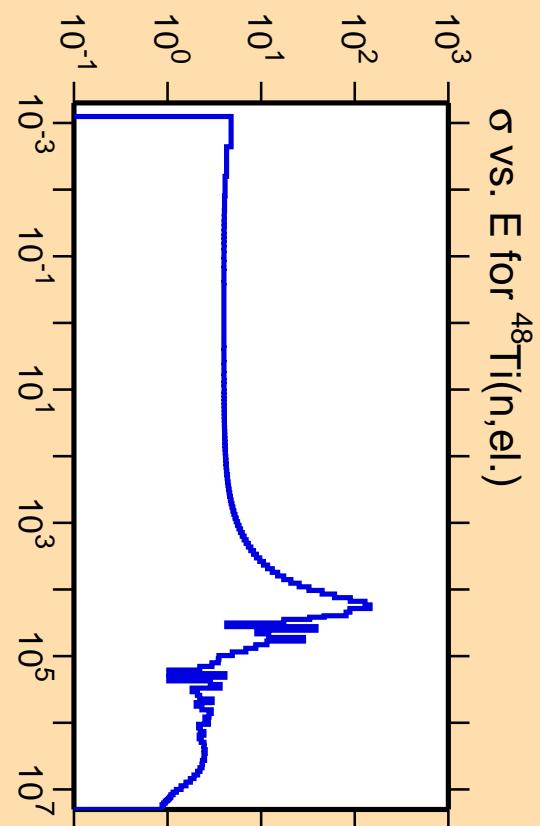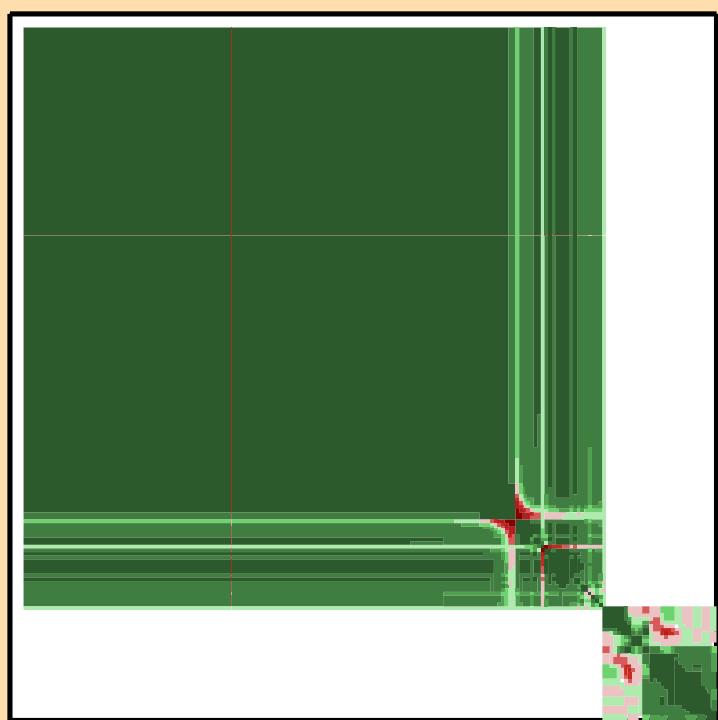

Correlation Matrix

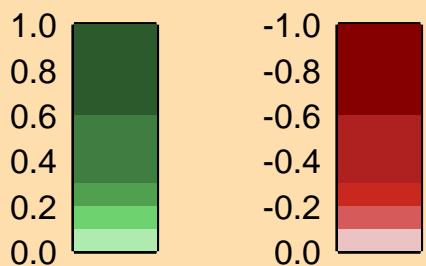


$\Delta\sigma/\sigma$ vs. E for $^{48}\text{Ti}(n,\text{inel.})$

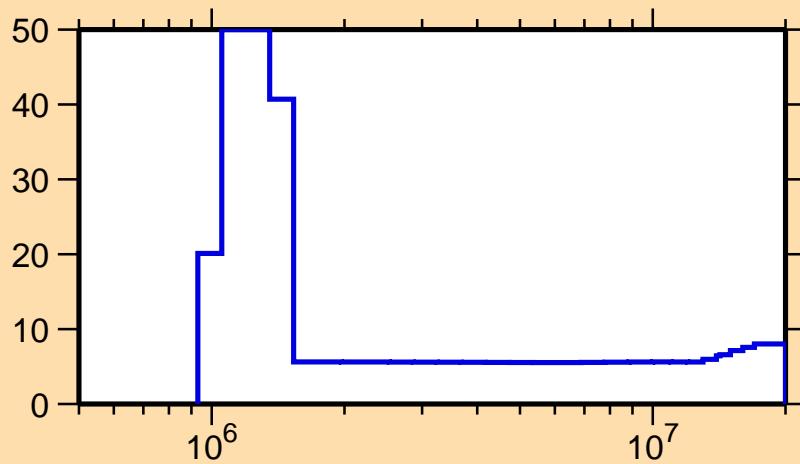

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{48}\text{Ti}(n,\text{inel.})$

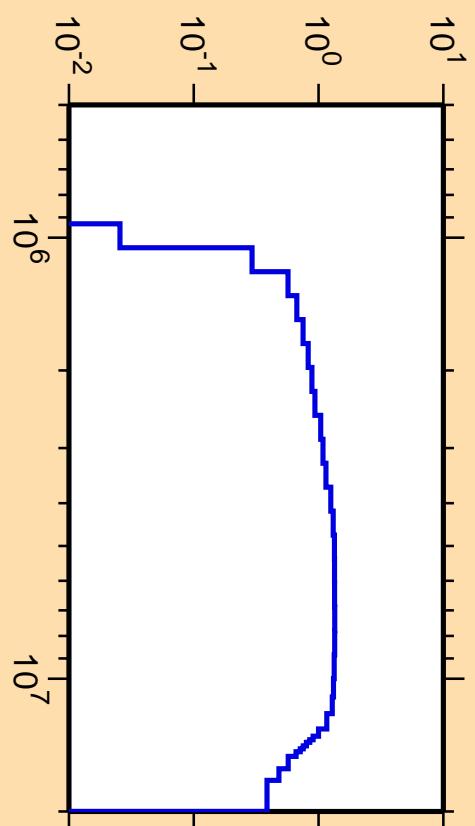

Correlation Matrix




$\Delta\sigma/\sigma$ vs. E for $^{48}\text{Ti}(n,2n)$

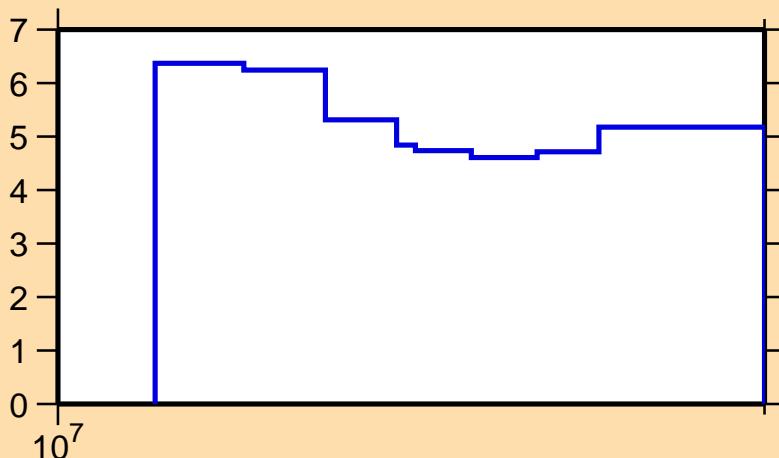


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

σ vs. E for $^{48}\text{Ti}(n,2n)$

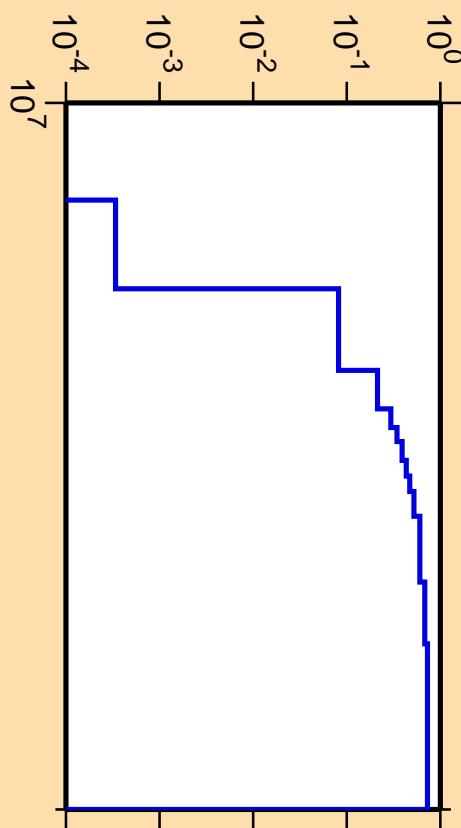

Correlation Matrix

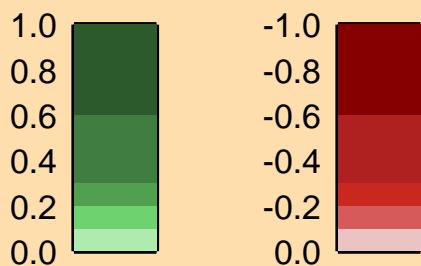

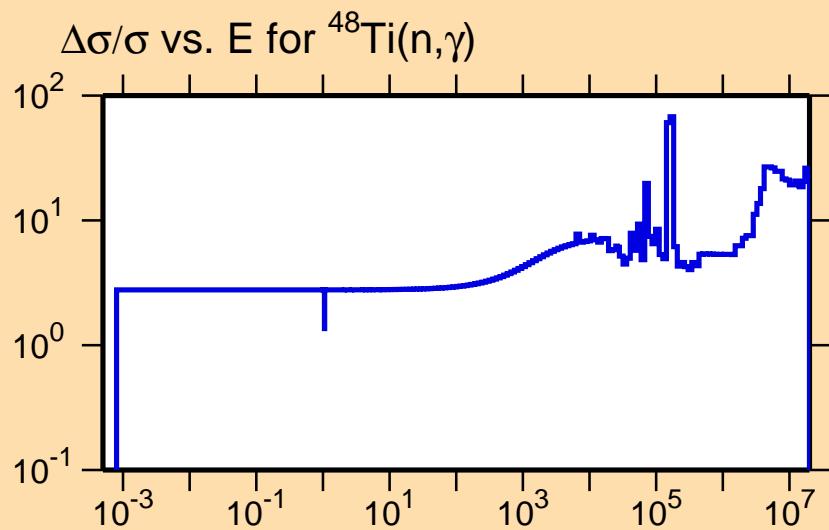

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

