

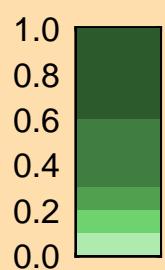
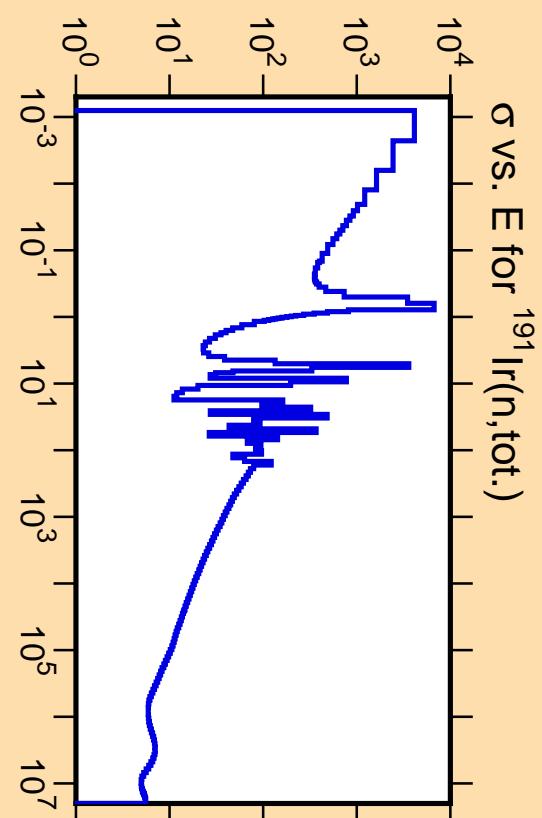


Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

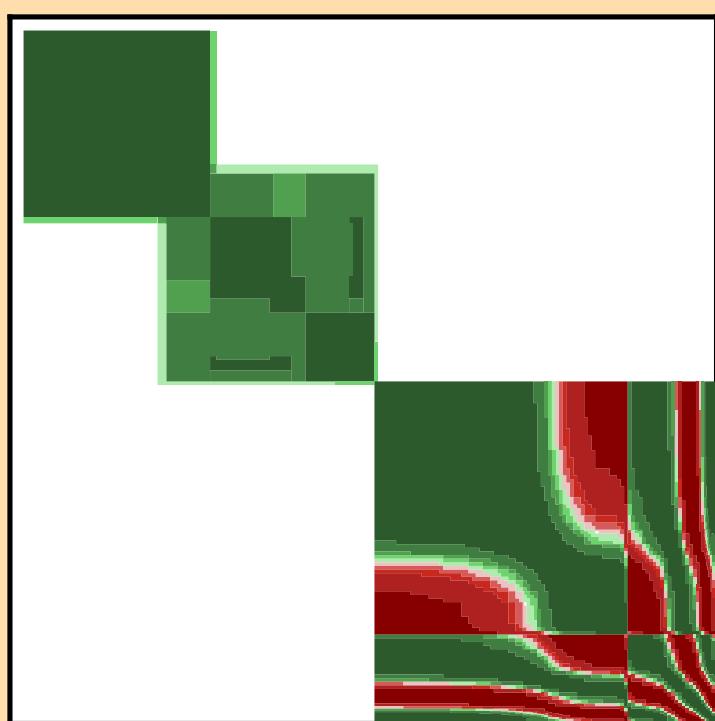


$\Delta\sigma/\sigma$ vs. E for $^{191}\text{Ir}(n,\text{el.})$

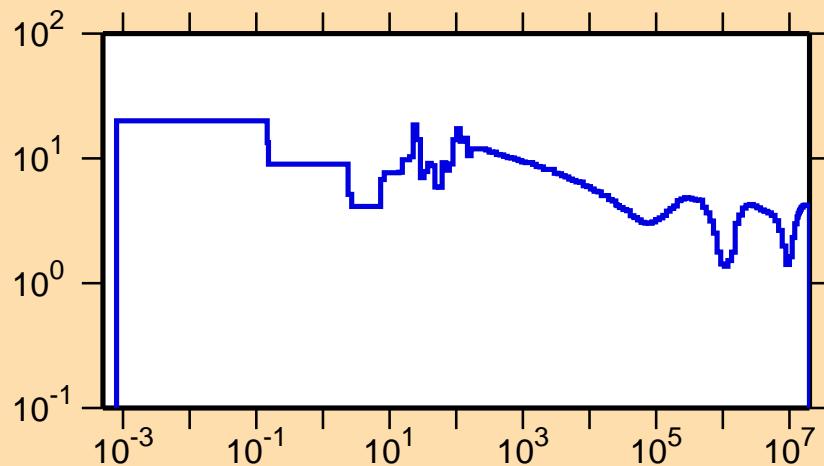



Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{191}\text{Ir}(n,\text{el.})$

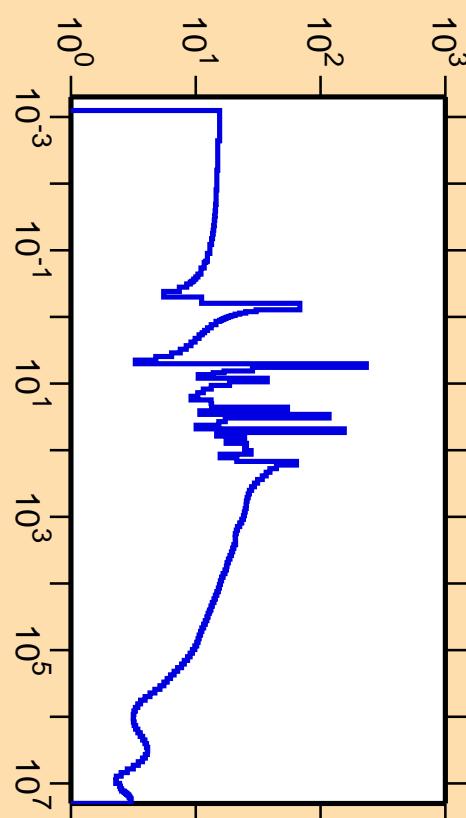

Correlation Matrix

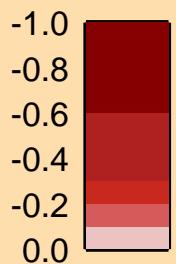
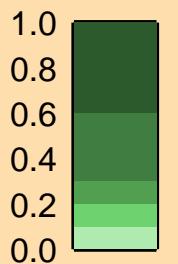


$\Delta\sigma/\sigma$ vs. E for $^{191}\text{Ir}(n,\text{inel.})$


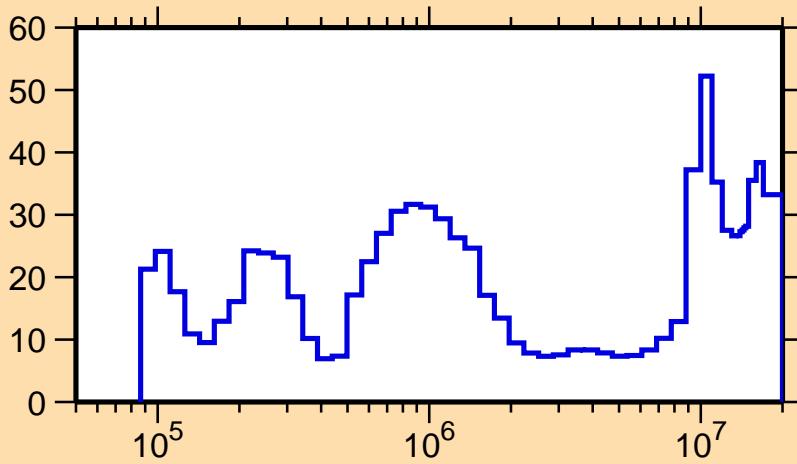


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

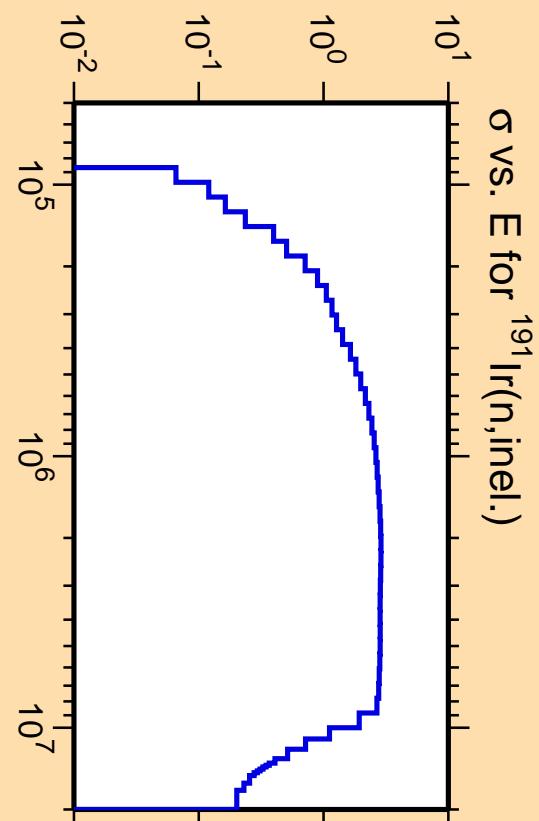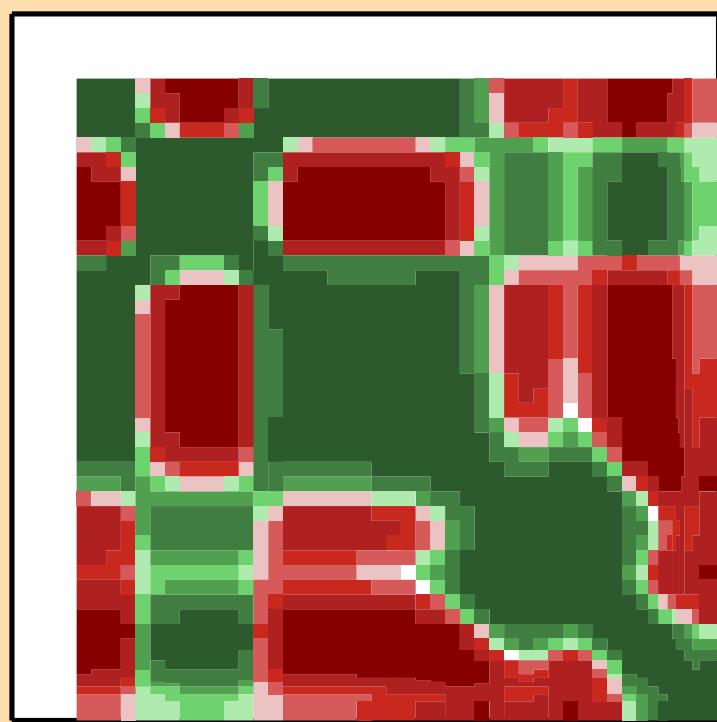

Correlation Matrix

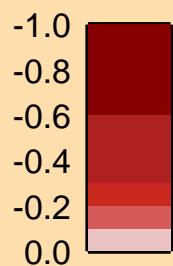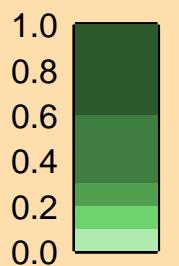


$\Delta\sigma/\sigma$ vs. E for $^{191}\text{Ir}(n,2n)$

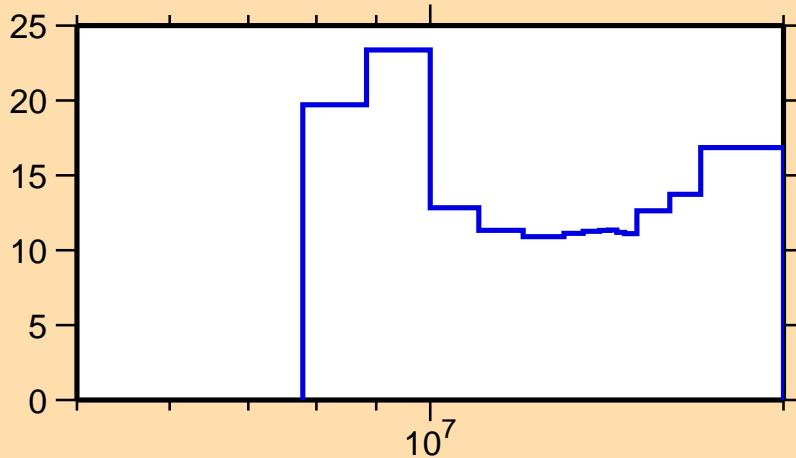

Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

σ vs. E for $^{191}\text{Ir}(n,2n)$

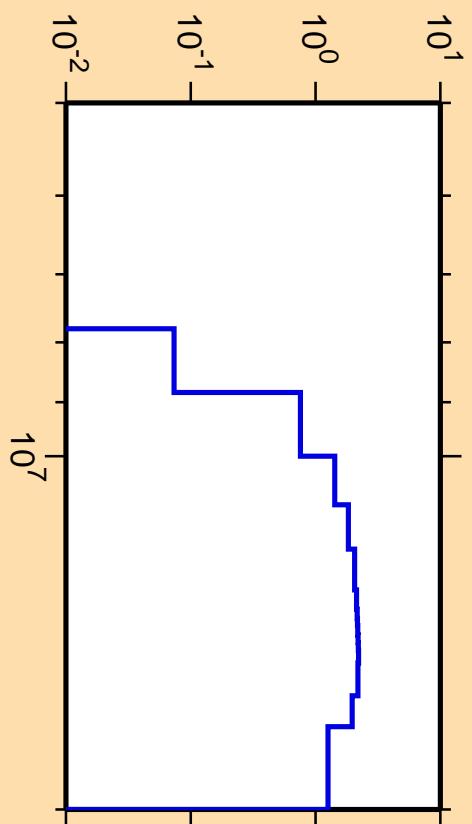


Correlation Matrix



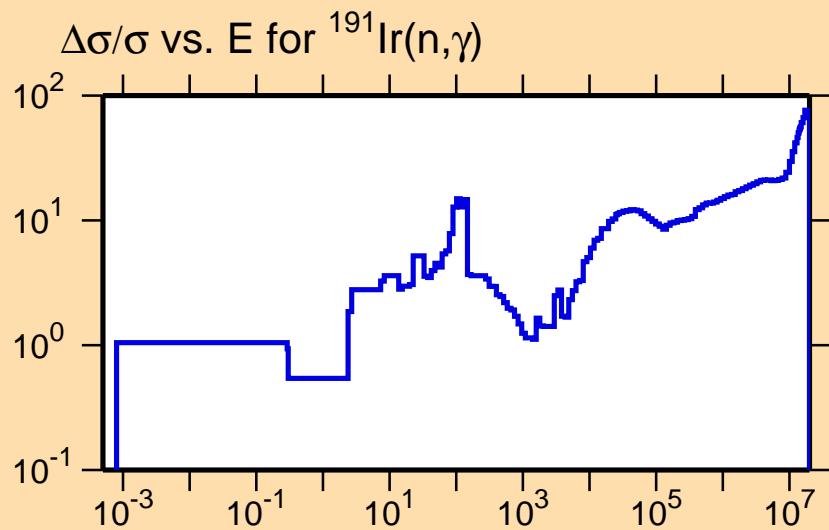

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

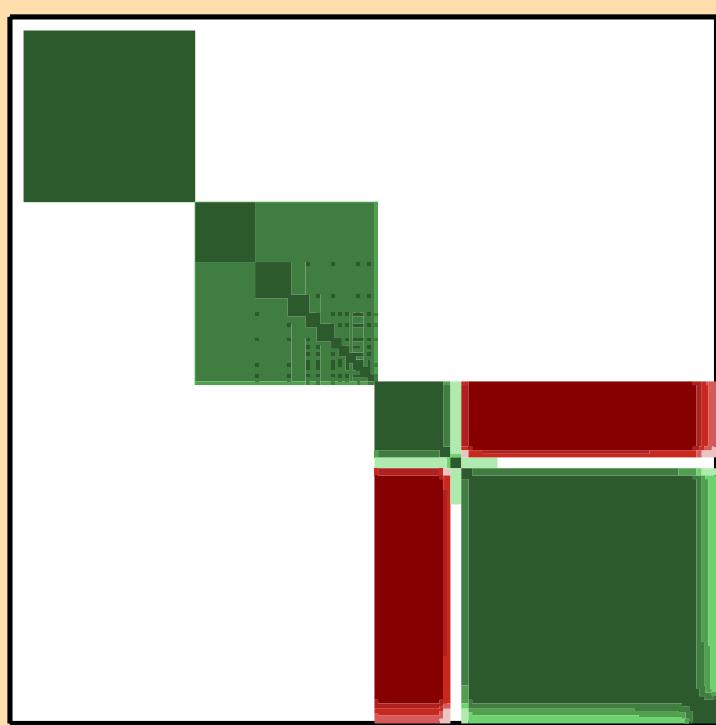

Correlation Matrix

