



$\Delta\sigma/\sigma$ vs. E for $^{166}\text{Er}(\text{n},\text{el.})$

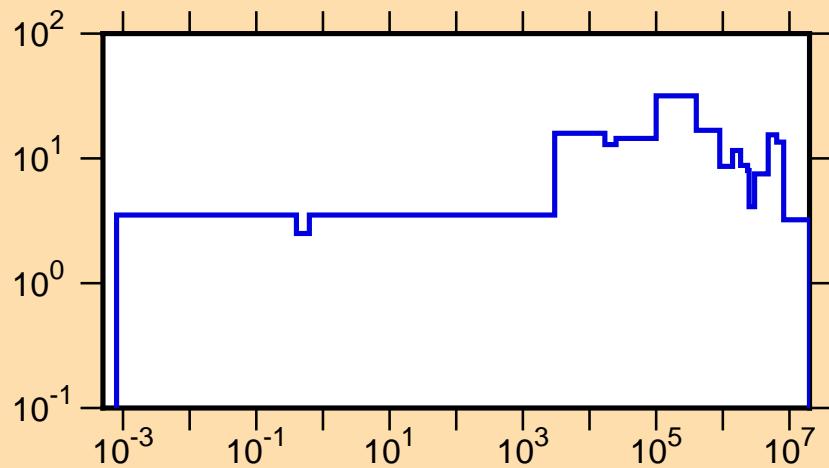

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{166}\text{Er}(\text{n},\text{el.})$

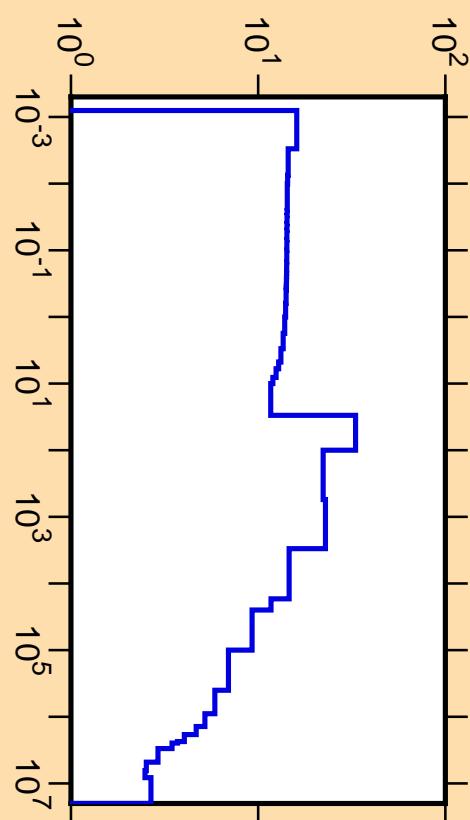

Correlation Matrix




$\Delta\sigma/\sigma$ vs. E for $^{166}\text{Er}(\text{n},\text{inel.})$

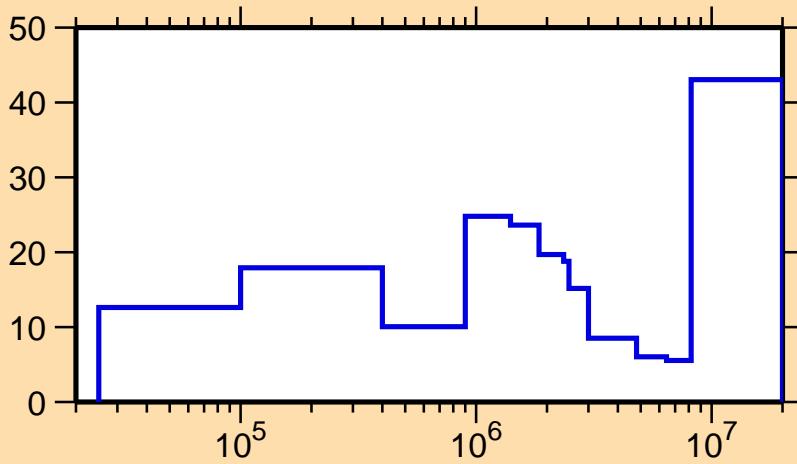



Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

σ vs. E for $^{166}\text{Er}(\text{n},\text{inel.})$

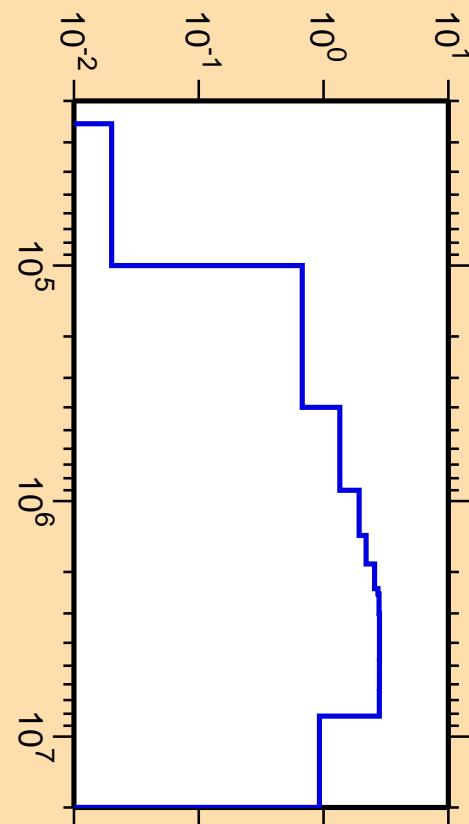



Correlation Matrix

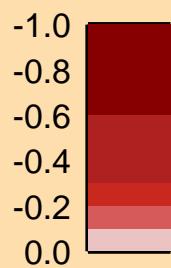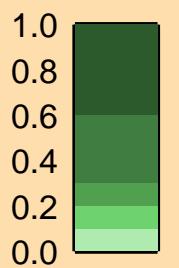

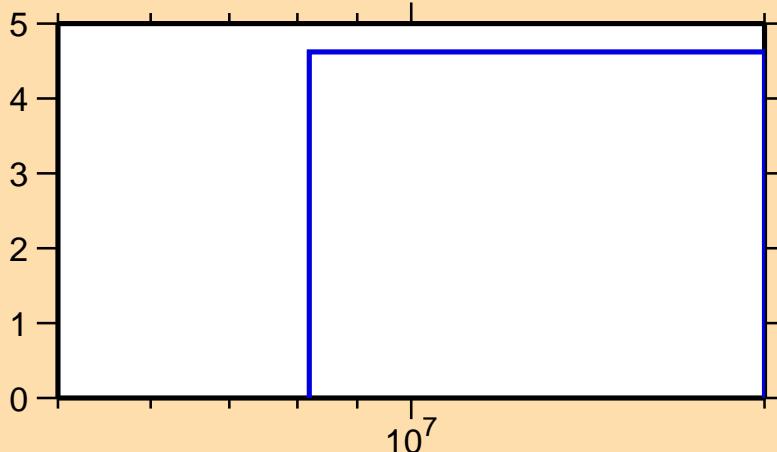


Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

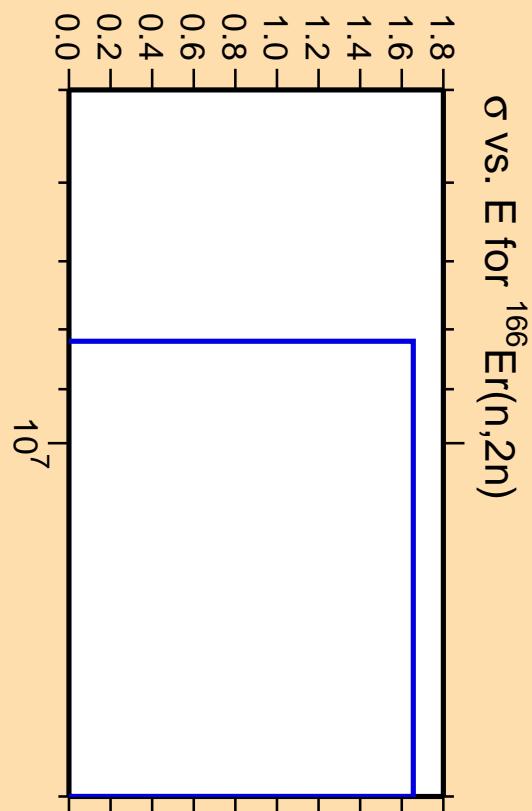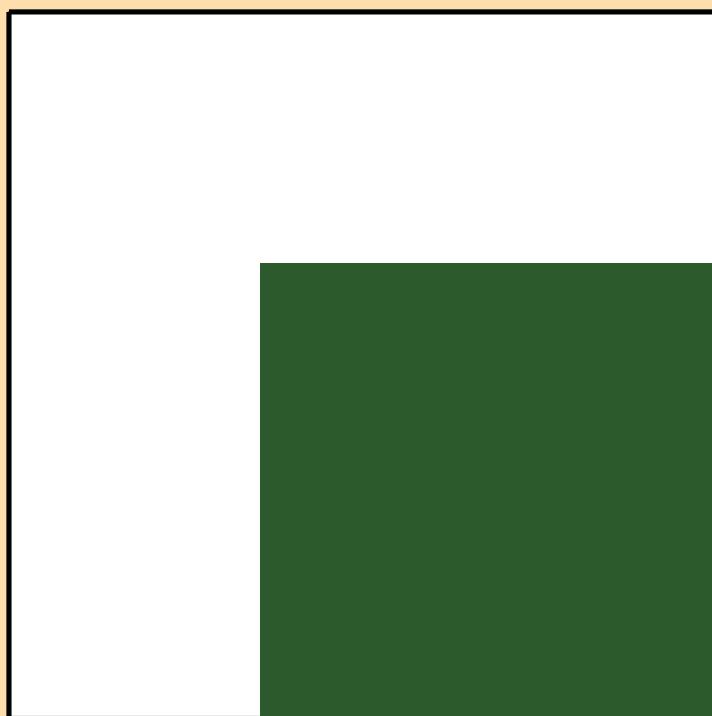



Correlation Matrix



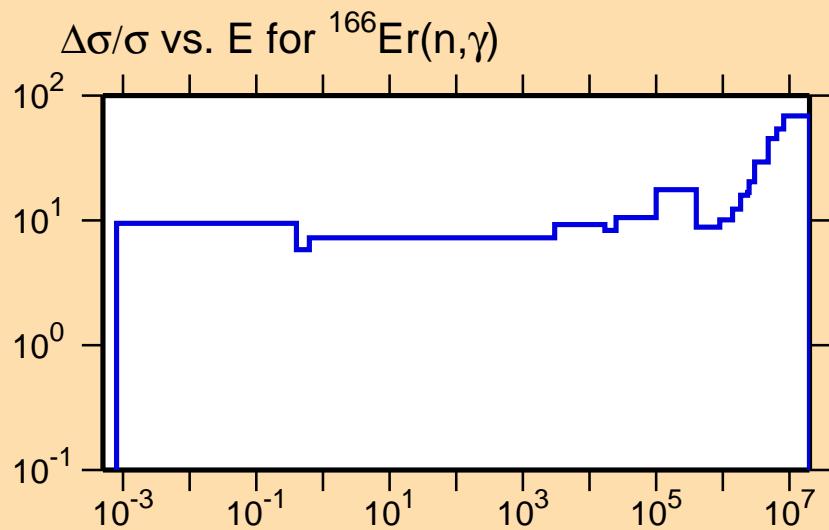

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

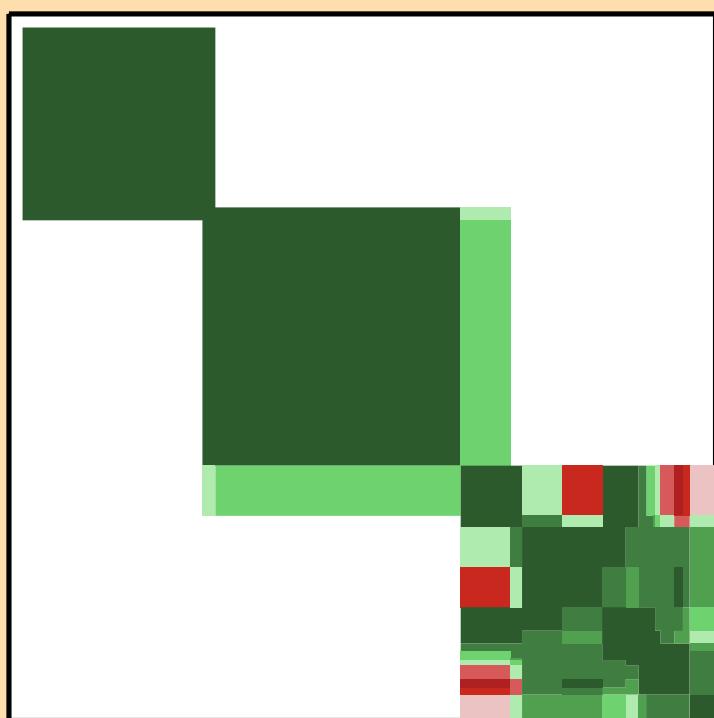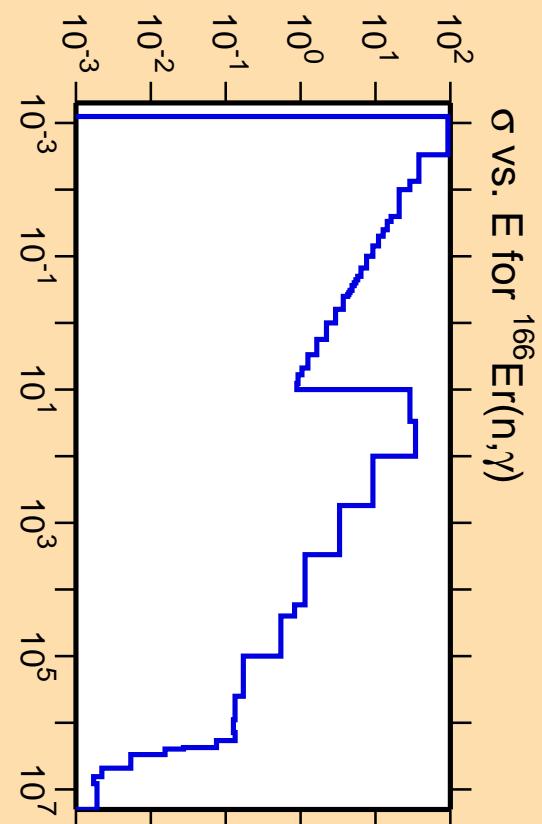

Correlation Matrix

