



$\Delta\sigma/\sigma$ vs. E for $^{206}\text{Pb}(n,\text{tot.})$

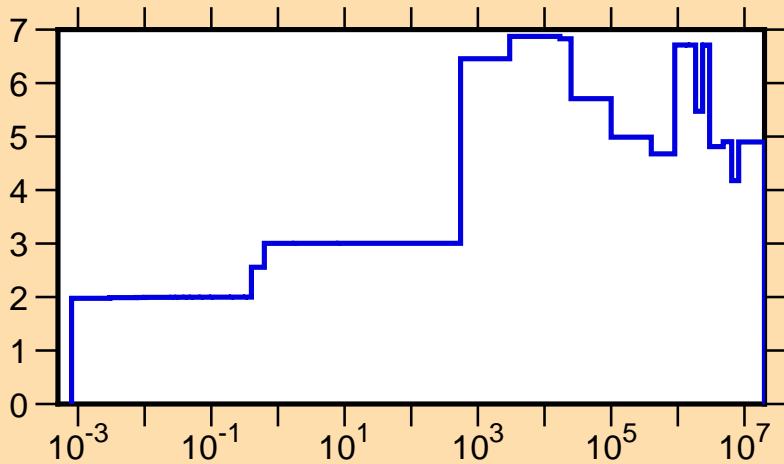

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{206}\text{Pb}(n,\text{tot.})$

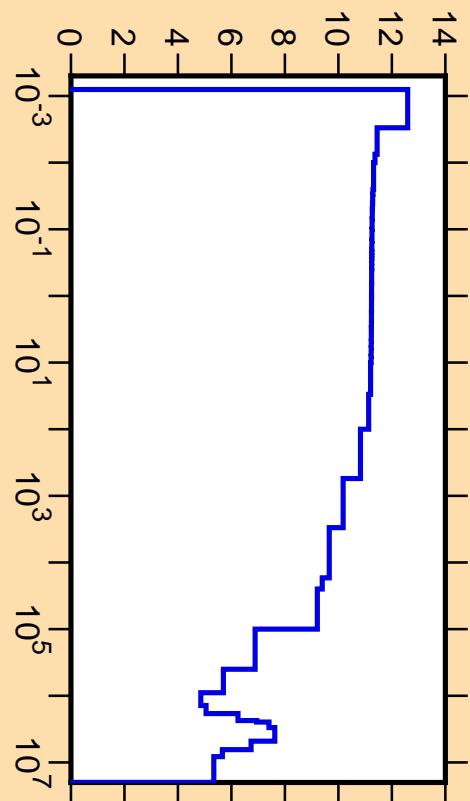

Correlation Matrix




$\Delta\sigma/\sigma$ vs. E for $^{206}\text{Pb}(n,\text{el.})$

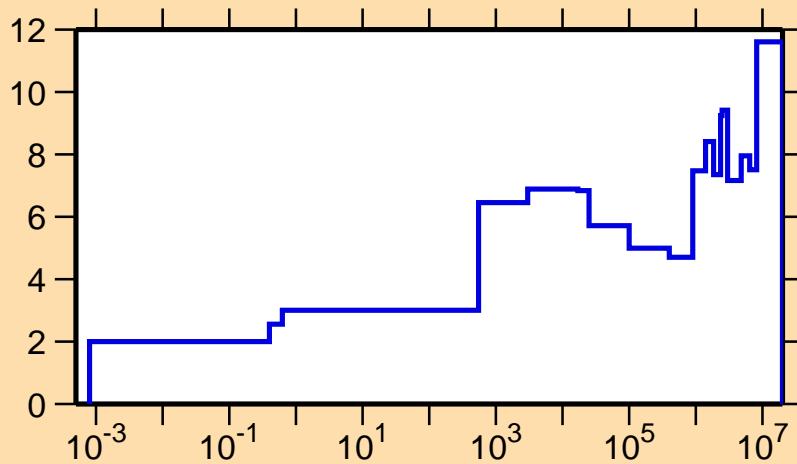



Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{206}\text{Pb}(n,\text{el.})$

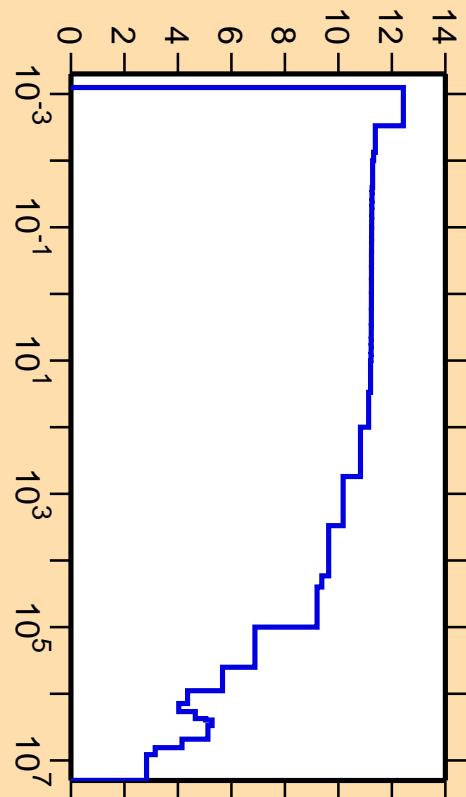

Correlation Matrix

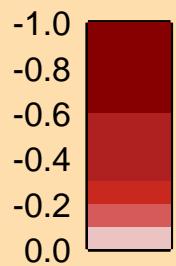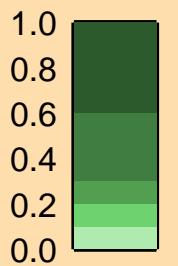


$\Delta\sigma/\sigma$ vs. E for $^{206}\text{Pb}(n,\text{inel.})$

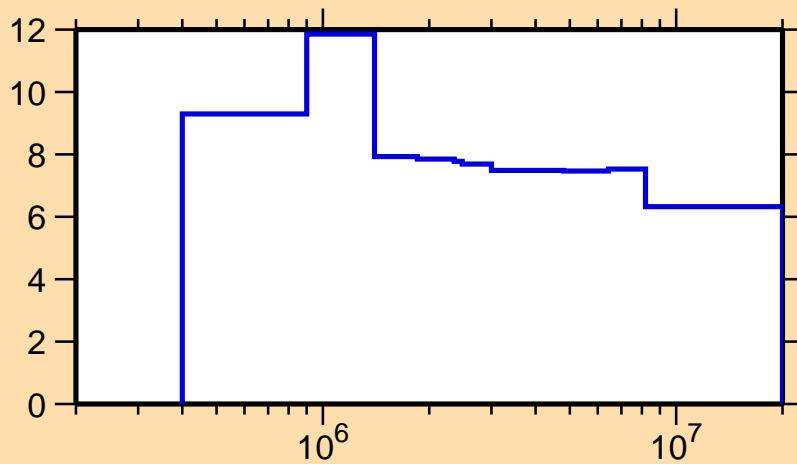


Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{206}\text{Pb}(n,\text{inel.})$

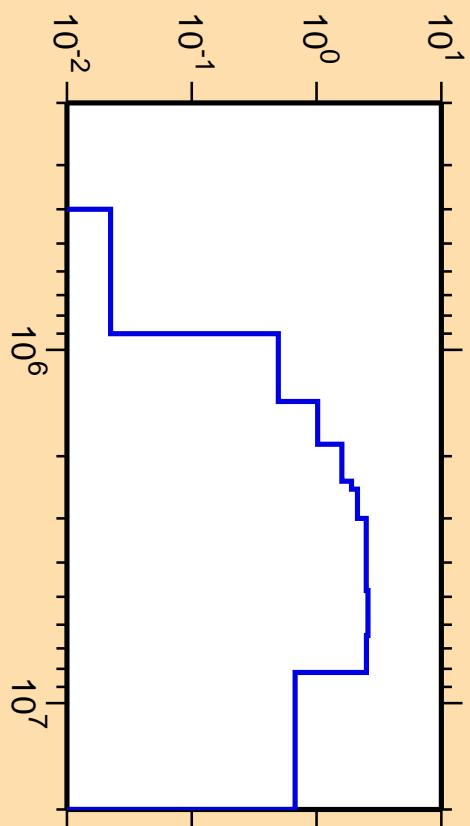

Correlation Matrix

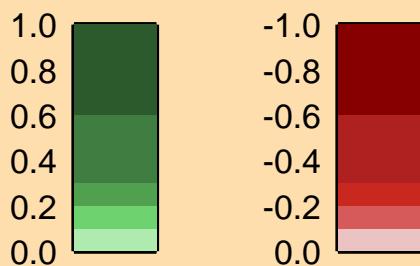


$\Delta\sigma/\sigma$ vs. E for $^{206}\text{Pb}(n,2n)$

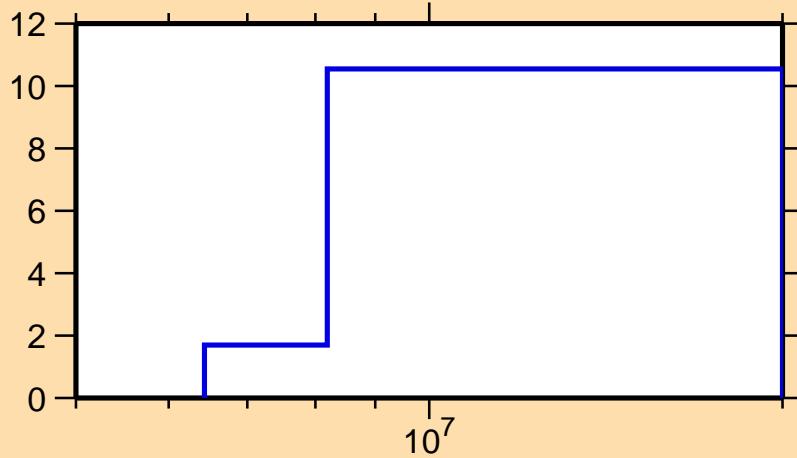

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).


σ vs. E for $^{206}\text{Pb}(n,2n)$

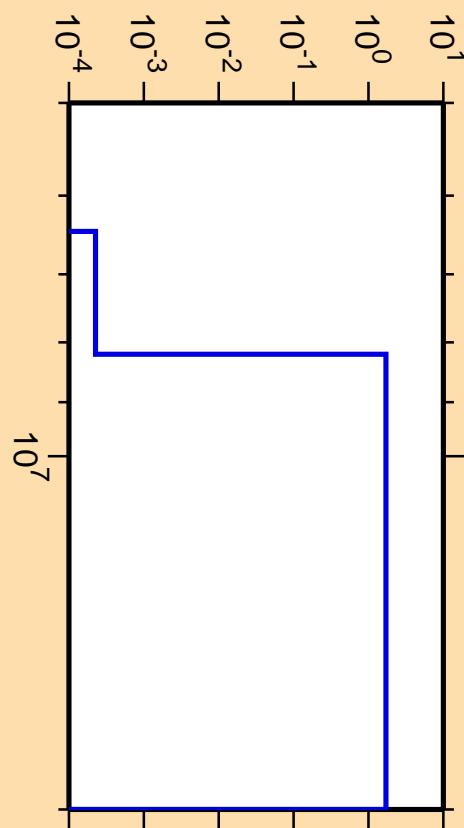


Correlation Matrix



Correlation Matrix

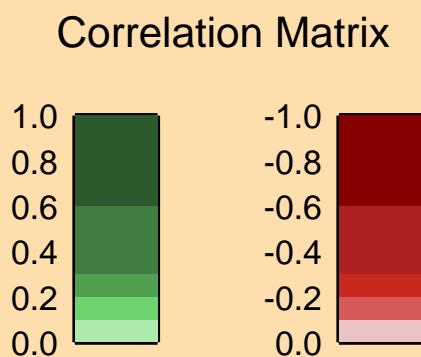


$\Delta\sigma/\sigma$ vs. E for $^{206}\text{Pb}(n,\gamma)$

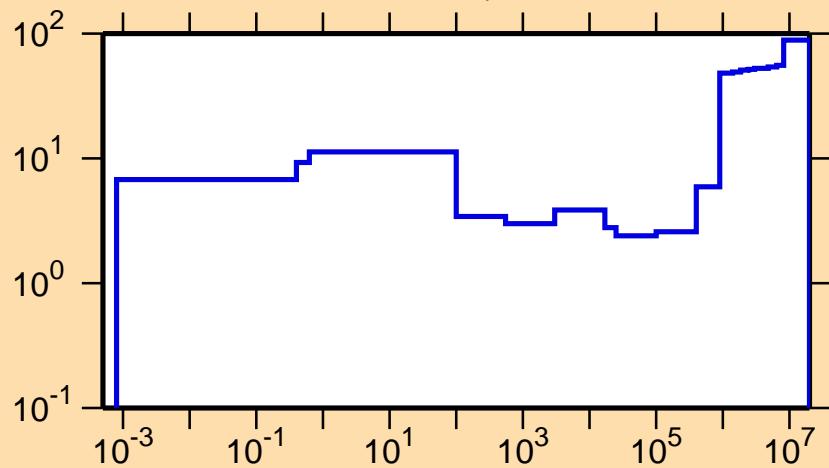

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

σ vs. E for $^{206}\text{Pb}(n,\gamma)$

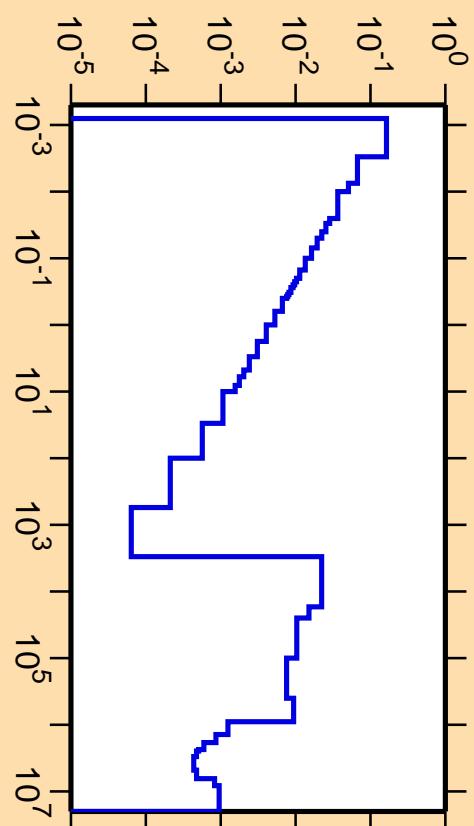

Correlation Matrix

