



$\Delta\sigma/\sigma$  vs. E for  $^{208}\text{Pb}(n,\text{tot.})$

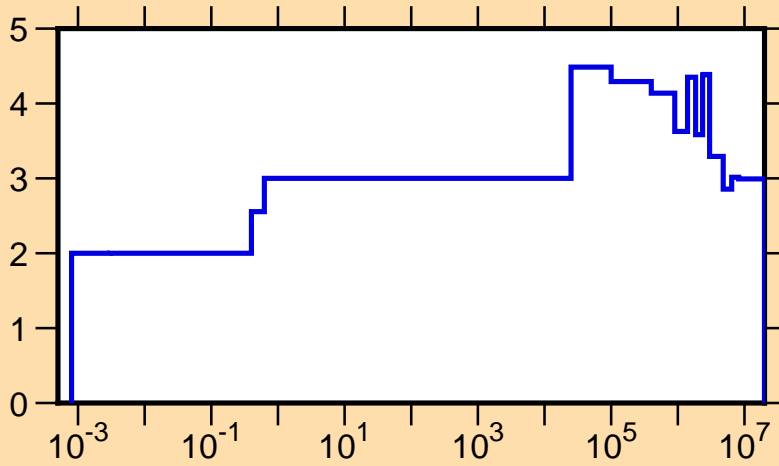


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

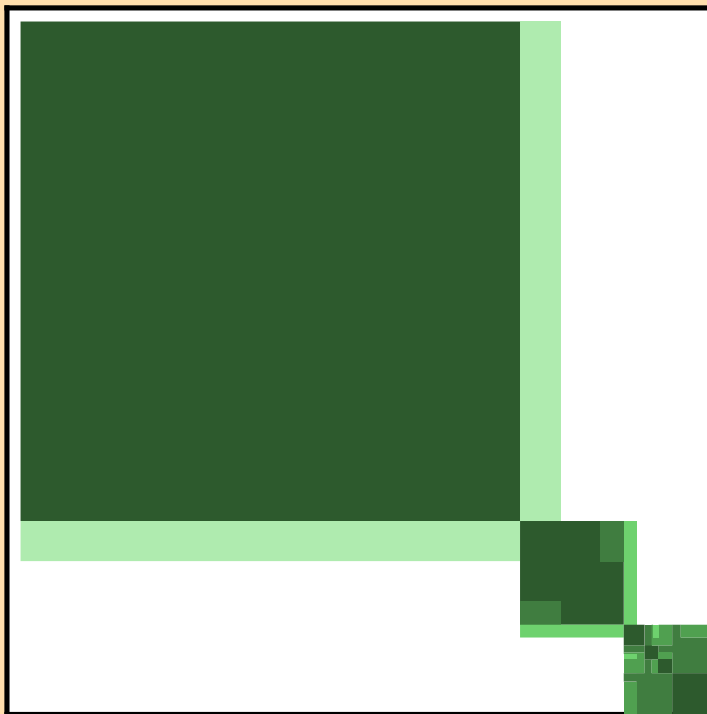

Correlation Matrix

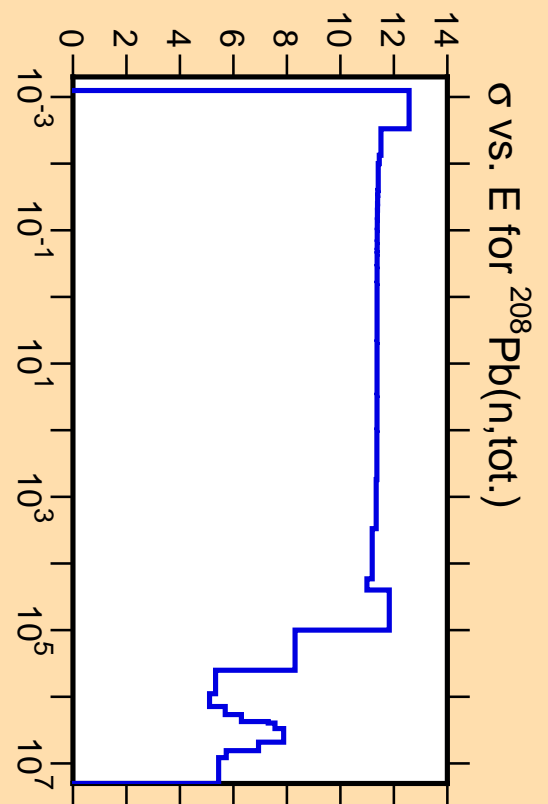


$\Delta\sigma/\sigma$  vs. E for  $^{208}\text{Pb}(n,\text{el.})$

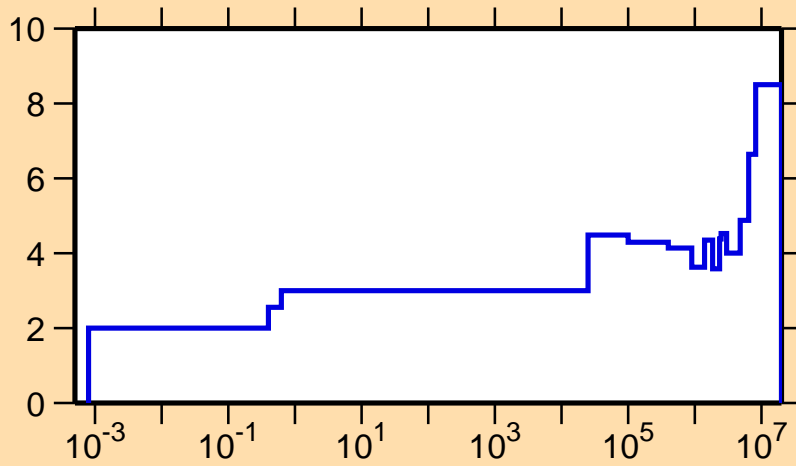


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

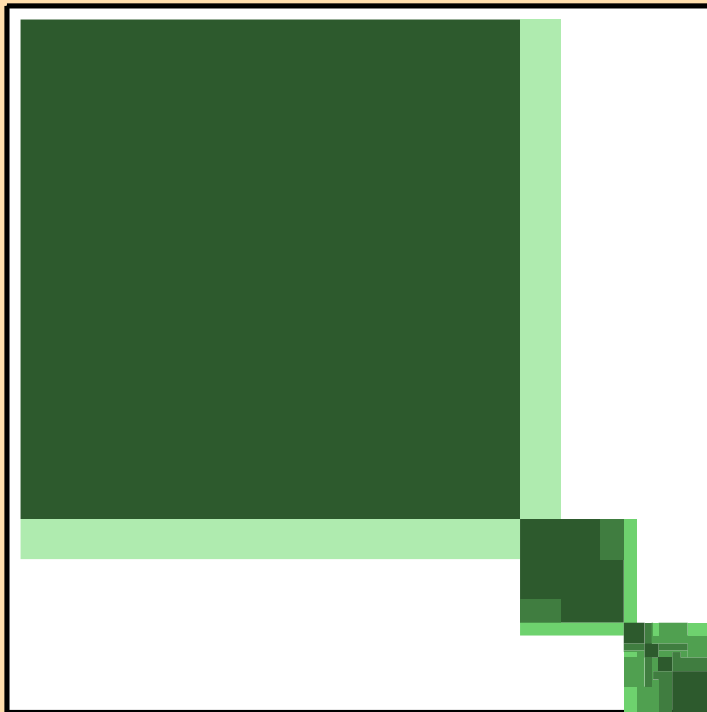

Correlation Matrix

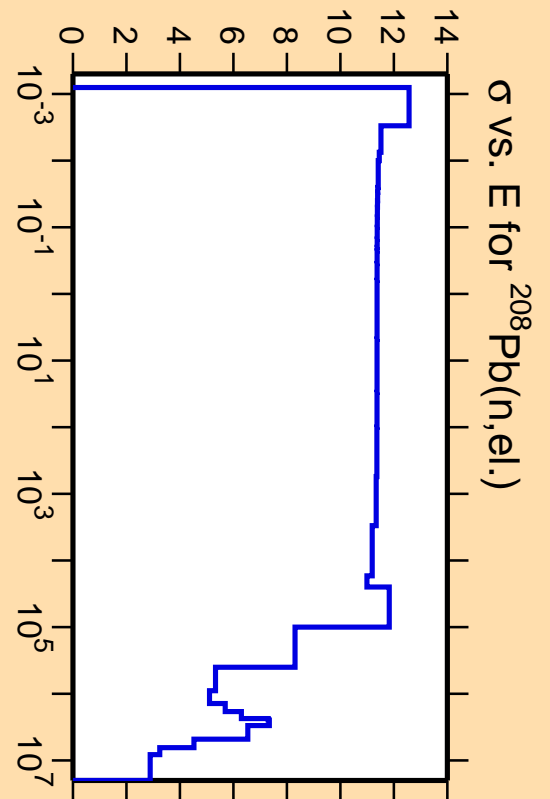


$\Delta\sigma/\sigma$  vs. E for  $^{208}\text{Pb}(n,\text{inel.})$

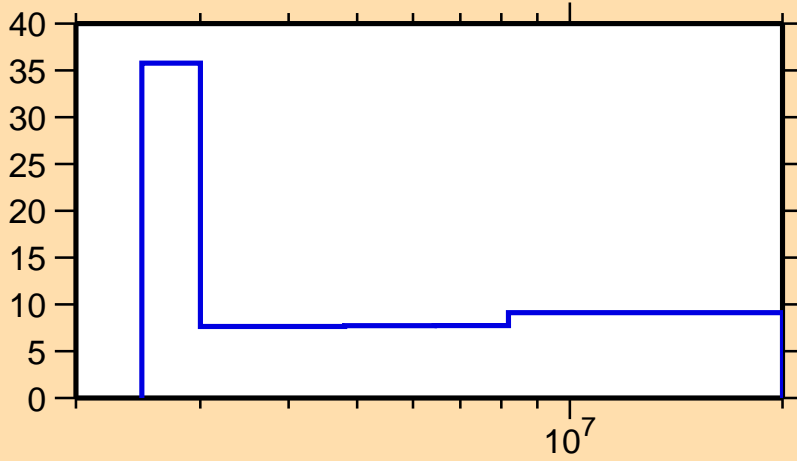


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

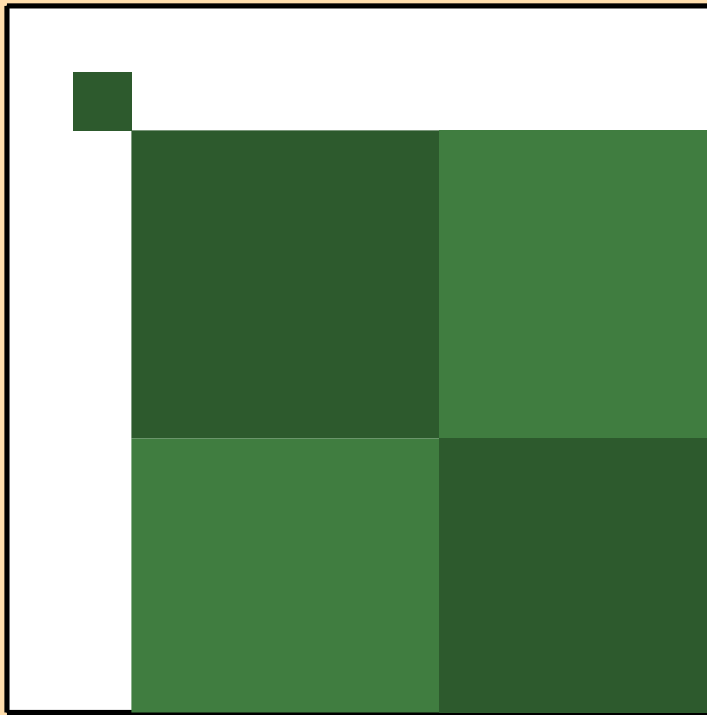

Correlation Matrix

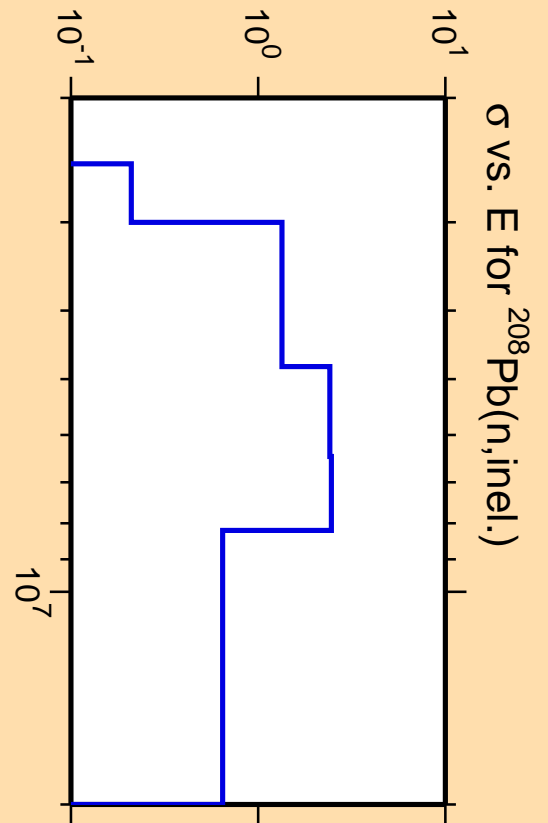


$\Delta\sigma/\sigma$  vs. E for  $^{208}\text{Pb}(n,2n)$

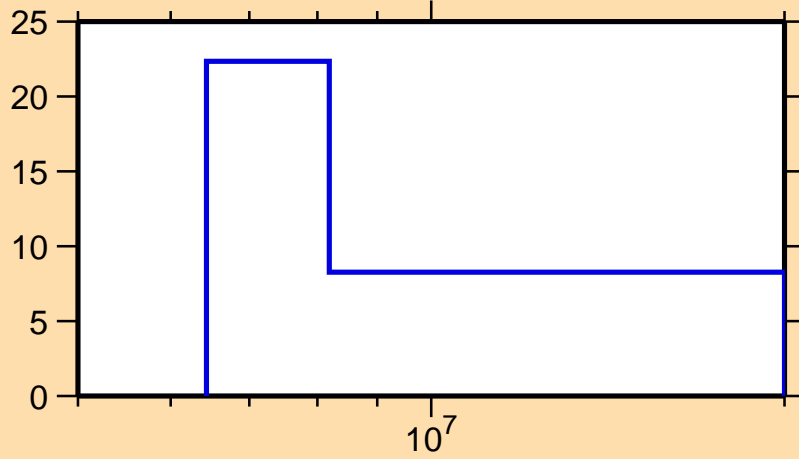


Ordinate scales are % relative standard deviation and barns.


Abscissa scales are energy (eV).

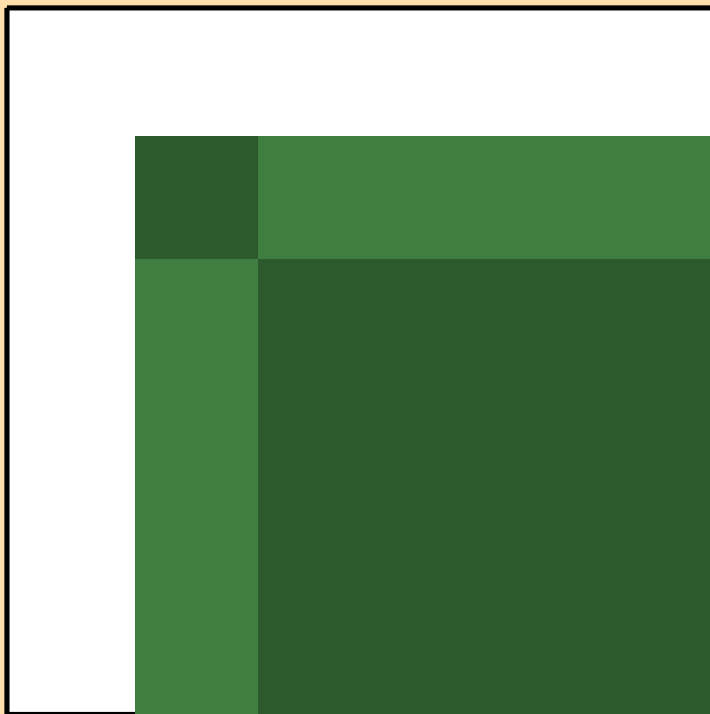

Correlation Matrix

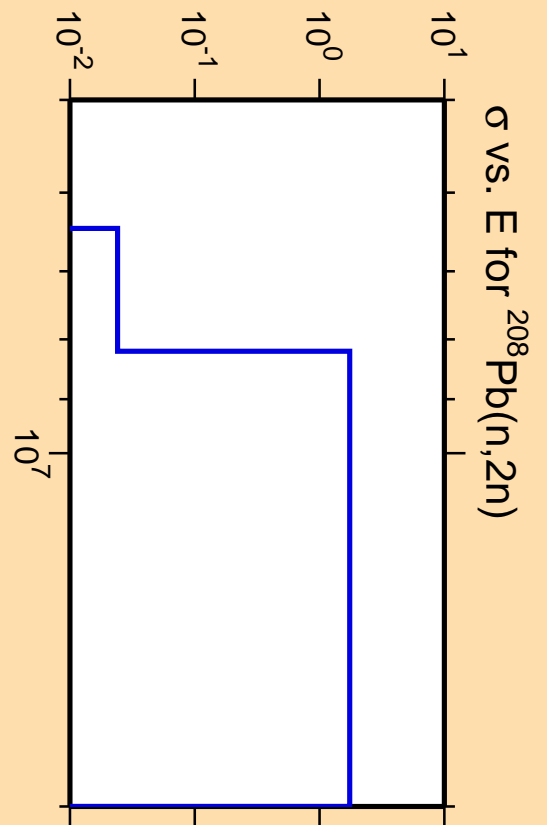


$\Delta\sigma/\sigma$  vs. E for  $^{208}\text{Pb}(n,\gamma)$

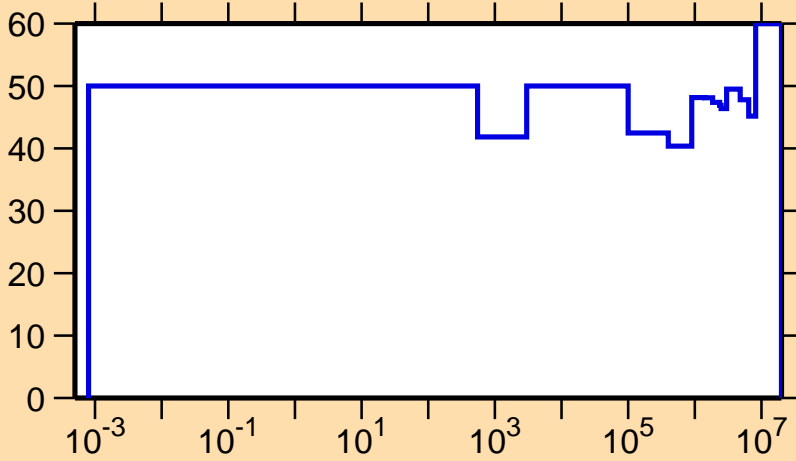

Ordinate scales are % relative standard deviation and barns.

Abscissa scales are energy (eV).

Warning: some uncertainty data were suppressed.

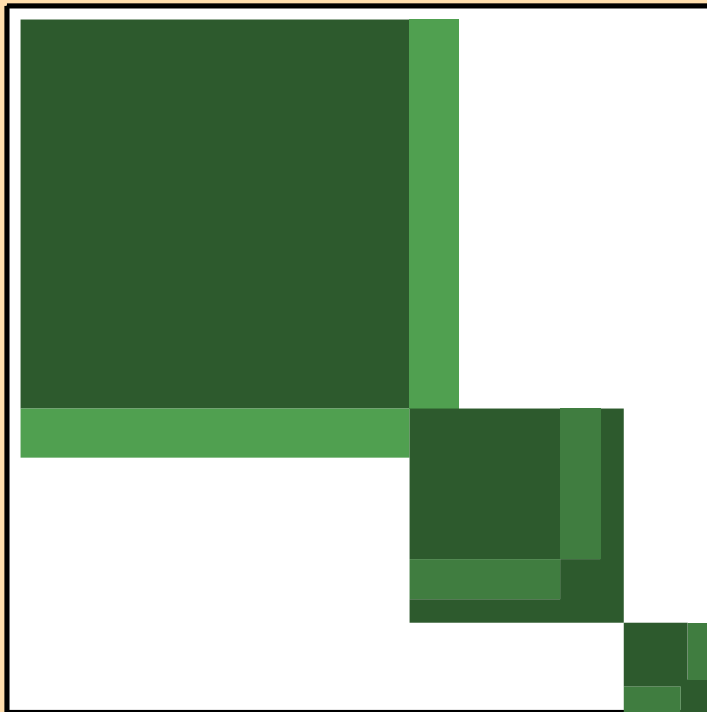

Correlation Matrix

